

 


**Autex
Acoustics®**


Vicinity™ Workstation Screens

Install Instructions


Range overview

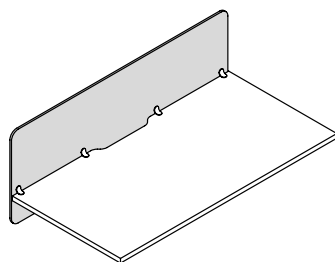

 
Hedge
600 mm/1800 mm*
*Above dimensions are recommended sizing

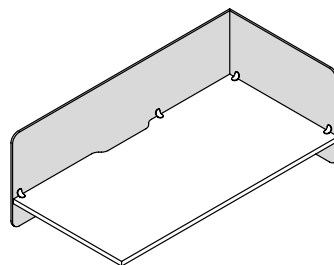


Haven
1600 mm/1800 mm

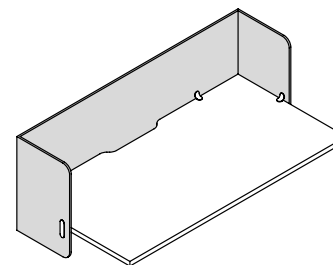 


Nook
1600 mm/1800 mm

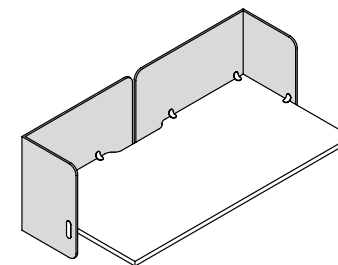 


Den
1600 mm/1800 mm

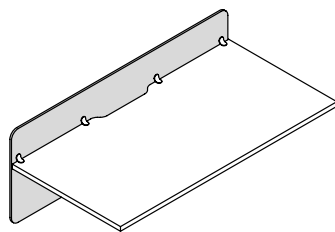 


Modesty
600 mm/1800 mm

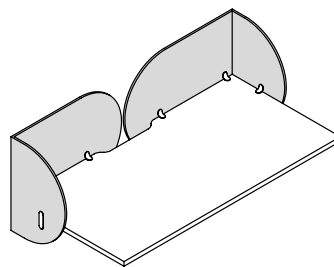 

Crest
1600 mm

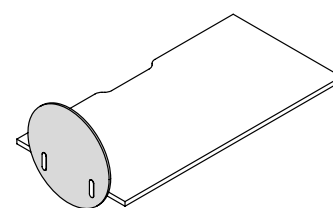 

Sol
600 mm

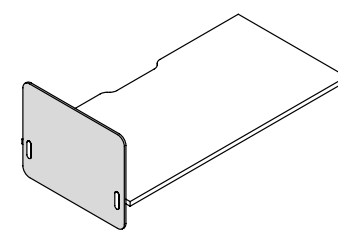 


Slate
800 mm



Attach clamps to screen

Align the Vicinity Workstation Clamp with the holes in the Vicinity Workstation Screen and assemble the components as shown.

 Note: The plugs may need to be removed from the holes.

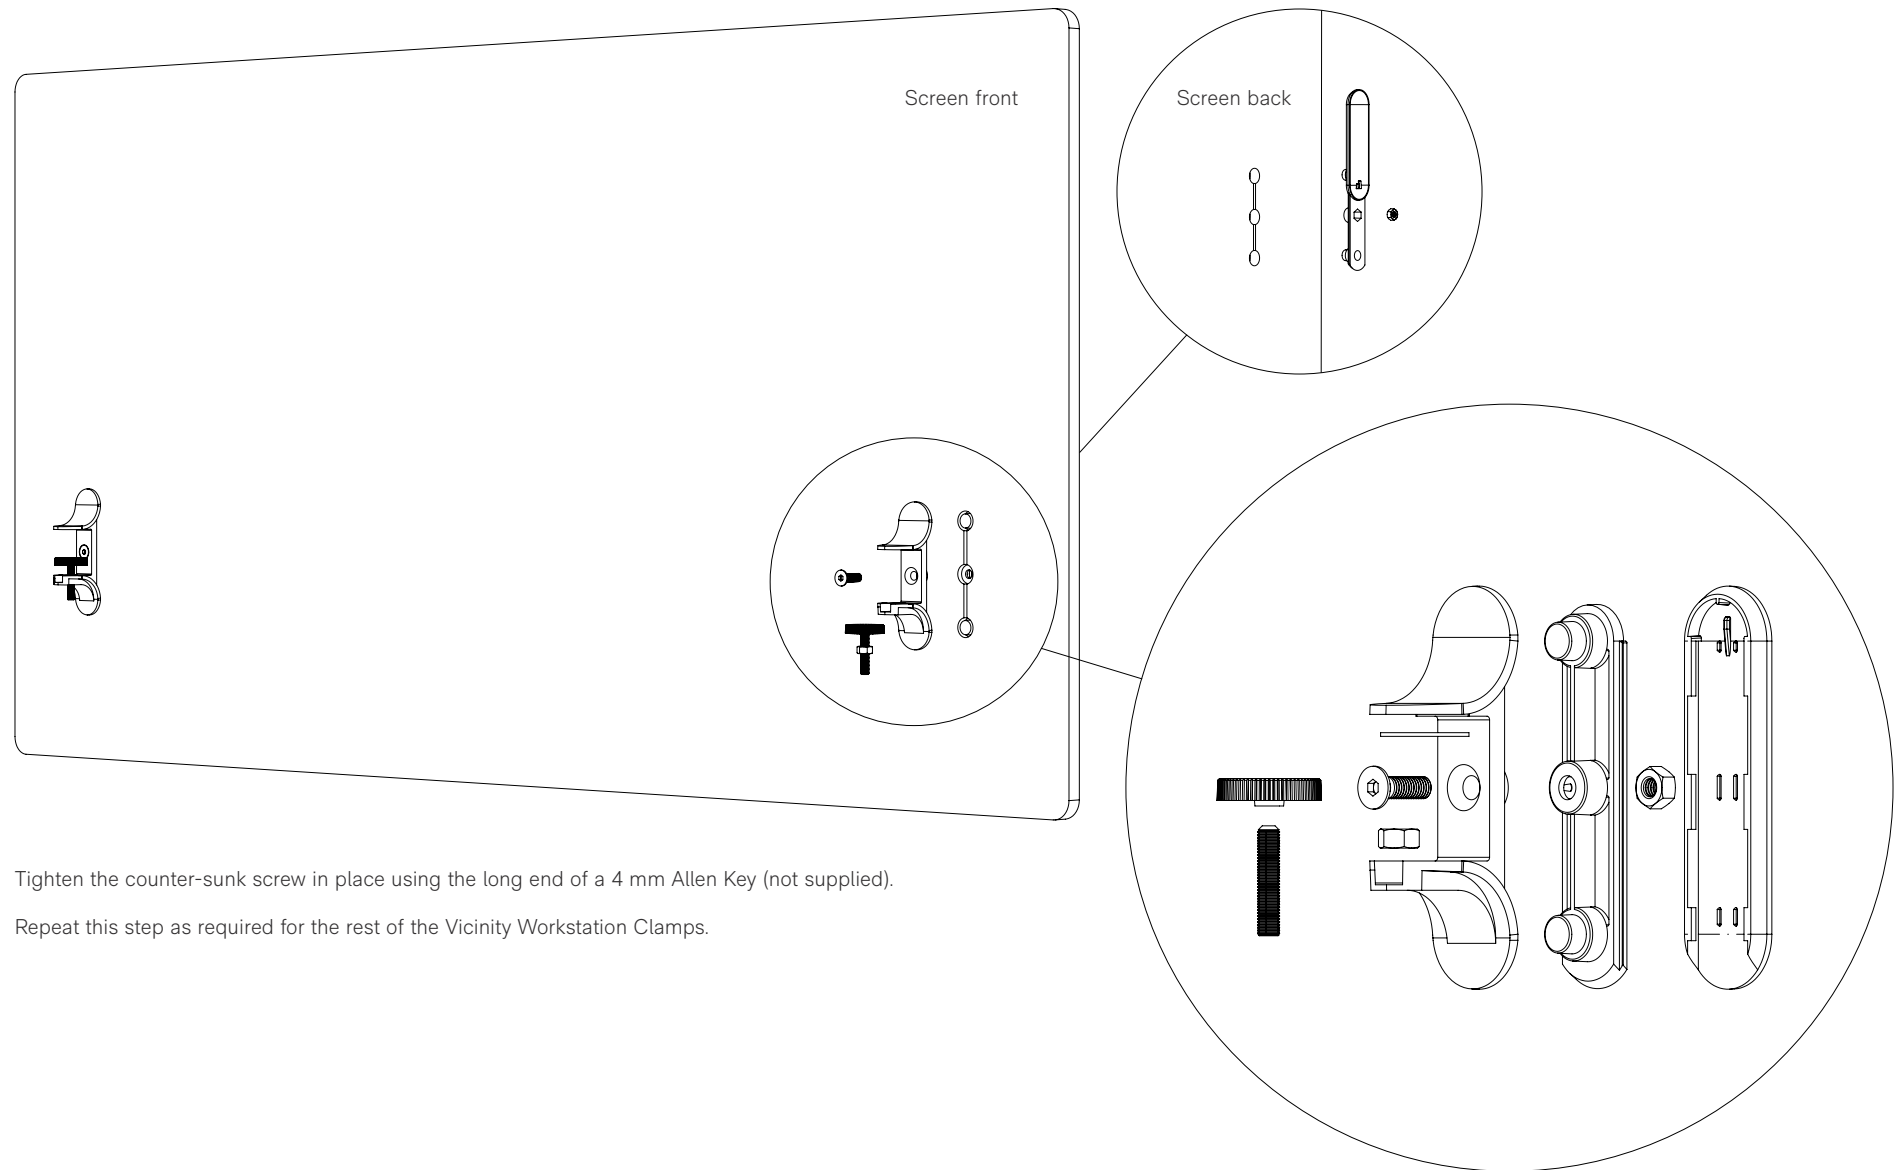



Tighten the counter-sunk screw in place using the long end of a 4 mm Allen Key (not supplied).

Repeat this step as required for the rest of the Vicinity Workstation Clamps.



Attach screen to desk

Fold the Vicinity Workstation Screen around the corners of the desk and attach the Vicinity clamps as shown in the detail below.

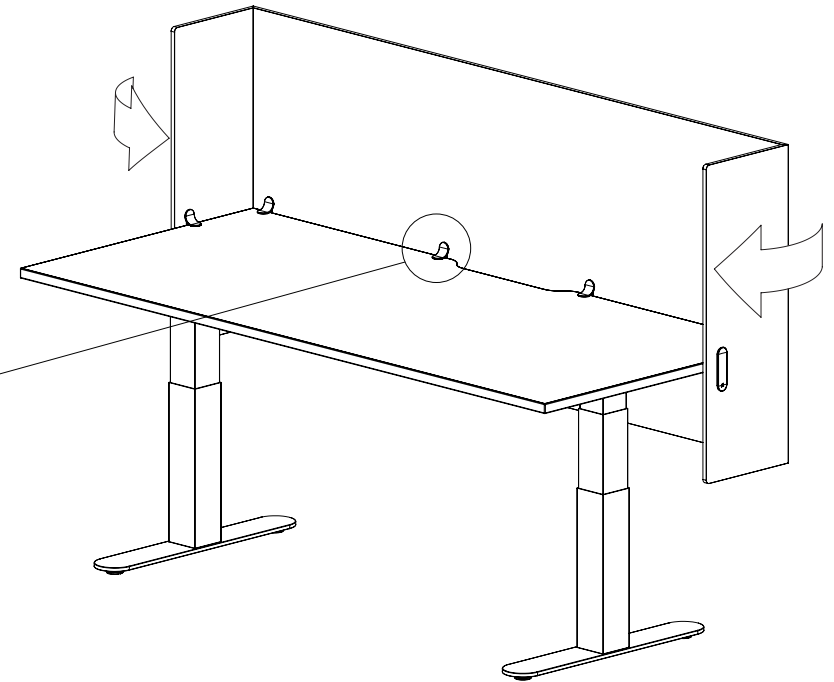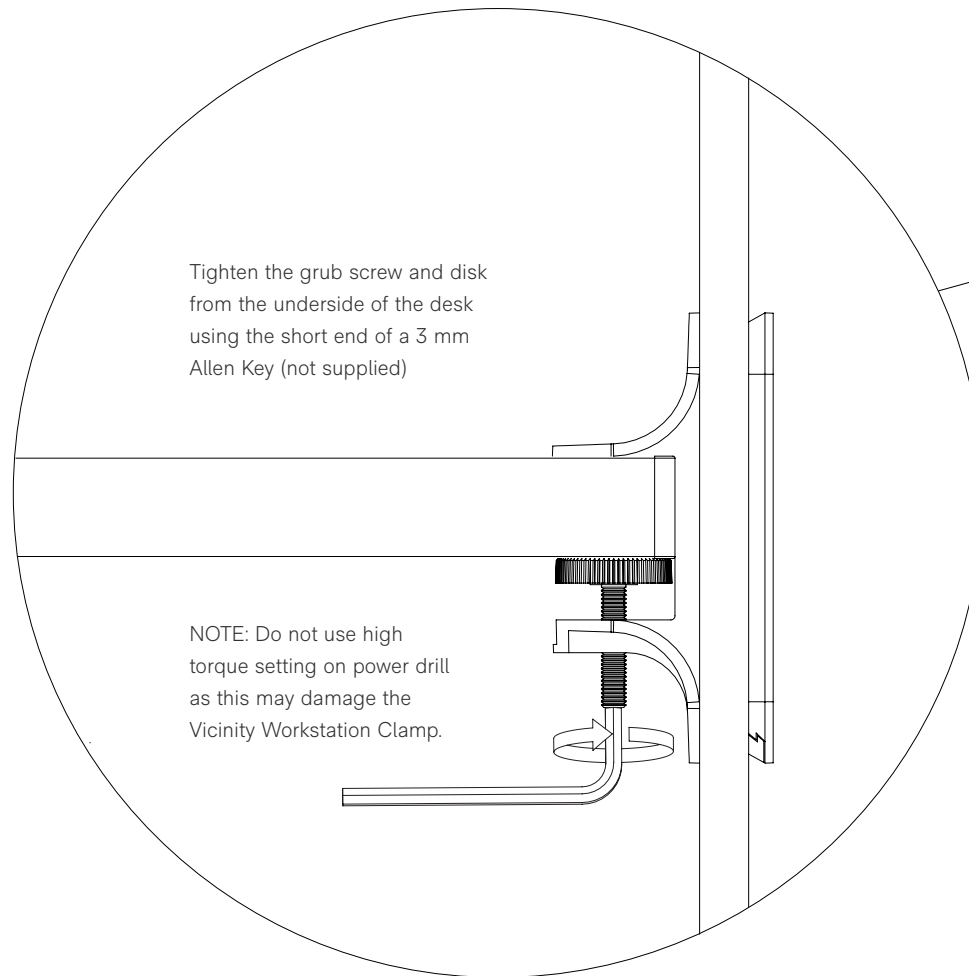


Repeat for the remaining Vicinity Workstation Clamps as required.

The Vicinity Workstation Screen is now secured to the desk.




Detail dimensions

 
Recommended heights

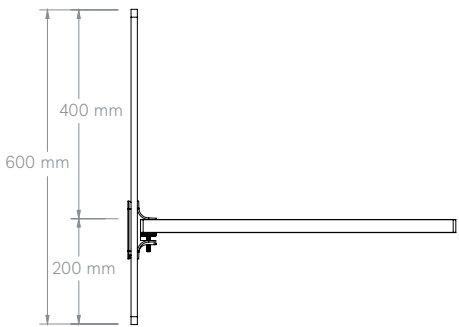


Edge clearance

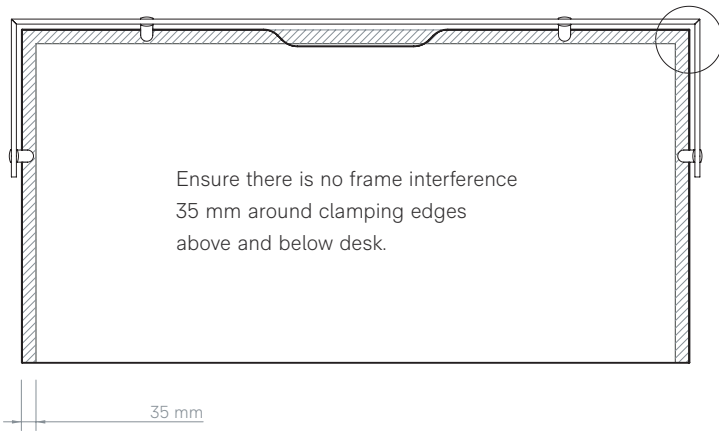 


Edge offset

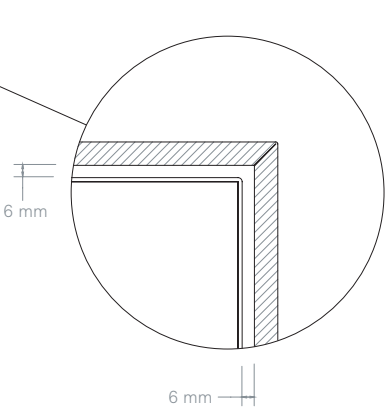 

Minimum desk thickness

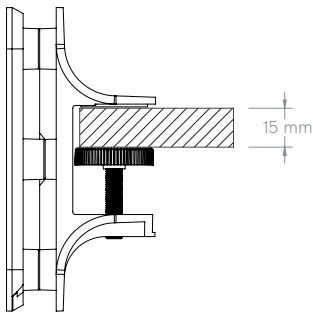 

Nominal desk thickness

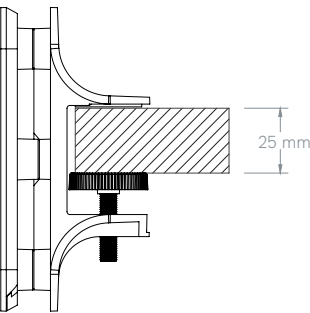 

Maximum desk thickness
(standard position)

