
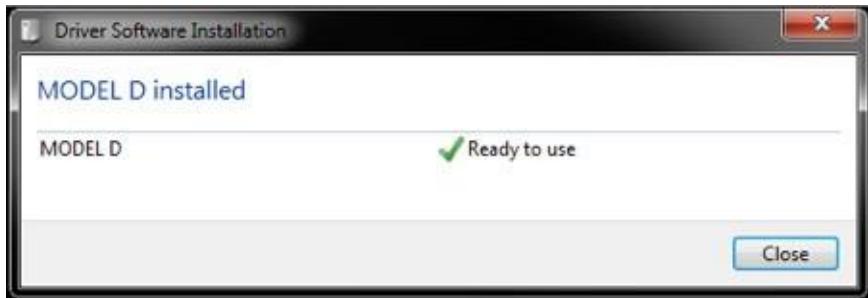


Model D Firmware Update Instructions


Version 1.0.6 - (11 May 2018)

Note: The model D updater V1.0.6 supports Windows 7 and onwards.

1. Download the Model D Firmware Updater V1.0.6 here: <http://www.musictri.be/Categories/Behringer/Keyboards/Synthesizers-and-Samplers/MODEL-D/p/P0CQJ/downloads>
2. Connect USB cable from your Model D to computer by using one of its on-board USB ports. Avoid using any USB hubs.
3. Connect the power supply and switch on the power for the Model D. You may notice that Windows highlights that a “New Device” has been connected and will install this device to your operating system - Please wait for this process to complete before proceeding. Once installed Windows will confirm this.

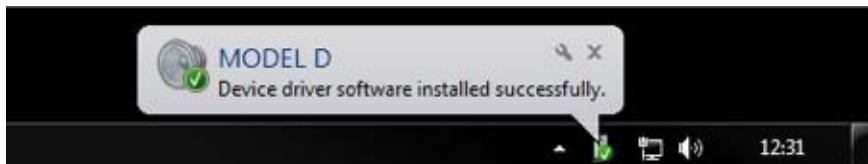

4. Open up the Model D Firmware Updater previously downloaded. It should connect to the Model D and display the device current firmware.

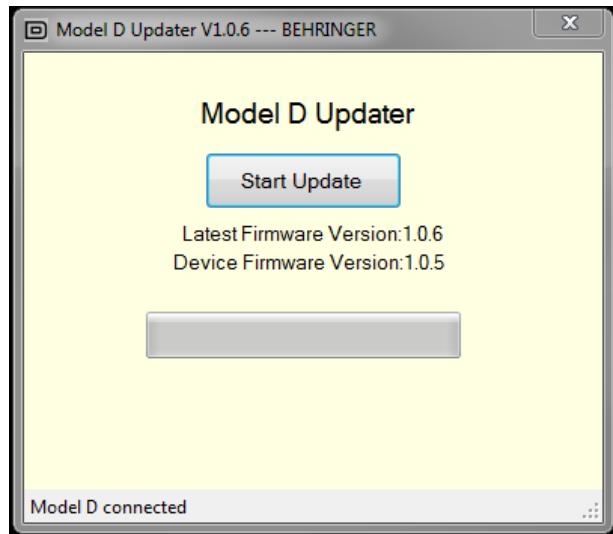


*If you see “Model D not detected” or if “Device Firmware Version” is blank you may need to update some system files to continue. Please install the Windows “.NET Compact Framework 2.0 Redistributable” (<https://www.microsoft.com/en-gb/download/confirmation.aspx?id=22808>).

If this doesn't solve the issue please contact our CARE team.



5. To begin the firmware update, click "START UPDATE"

This may take some time to complete so please be patient whilst the update completes.

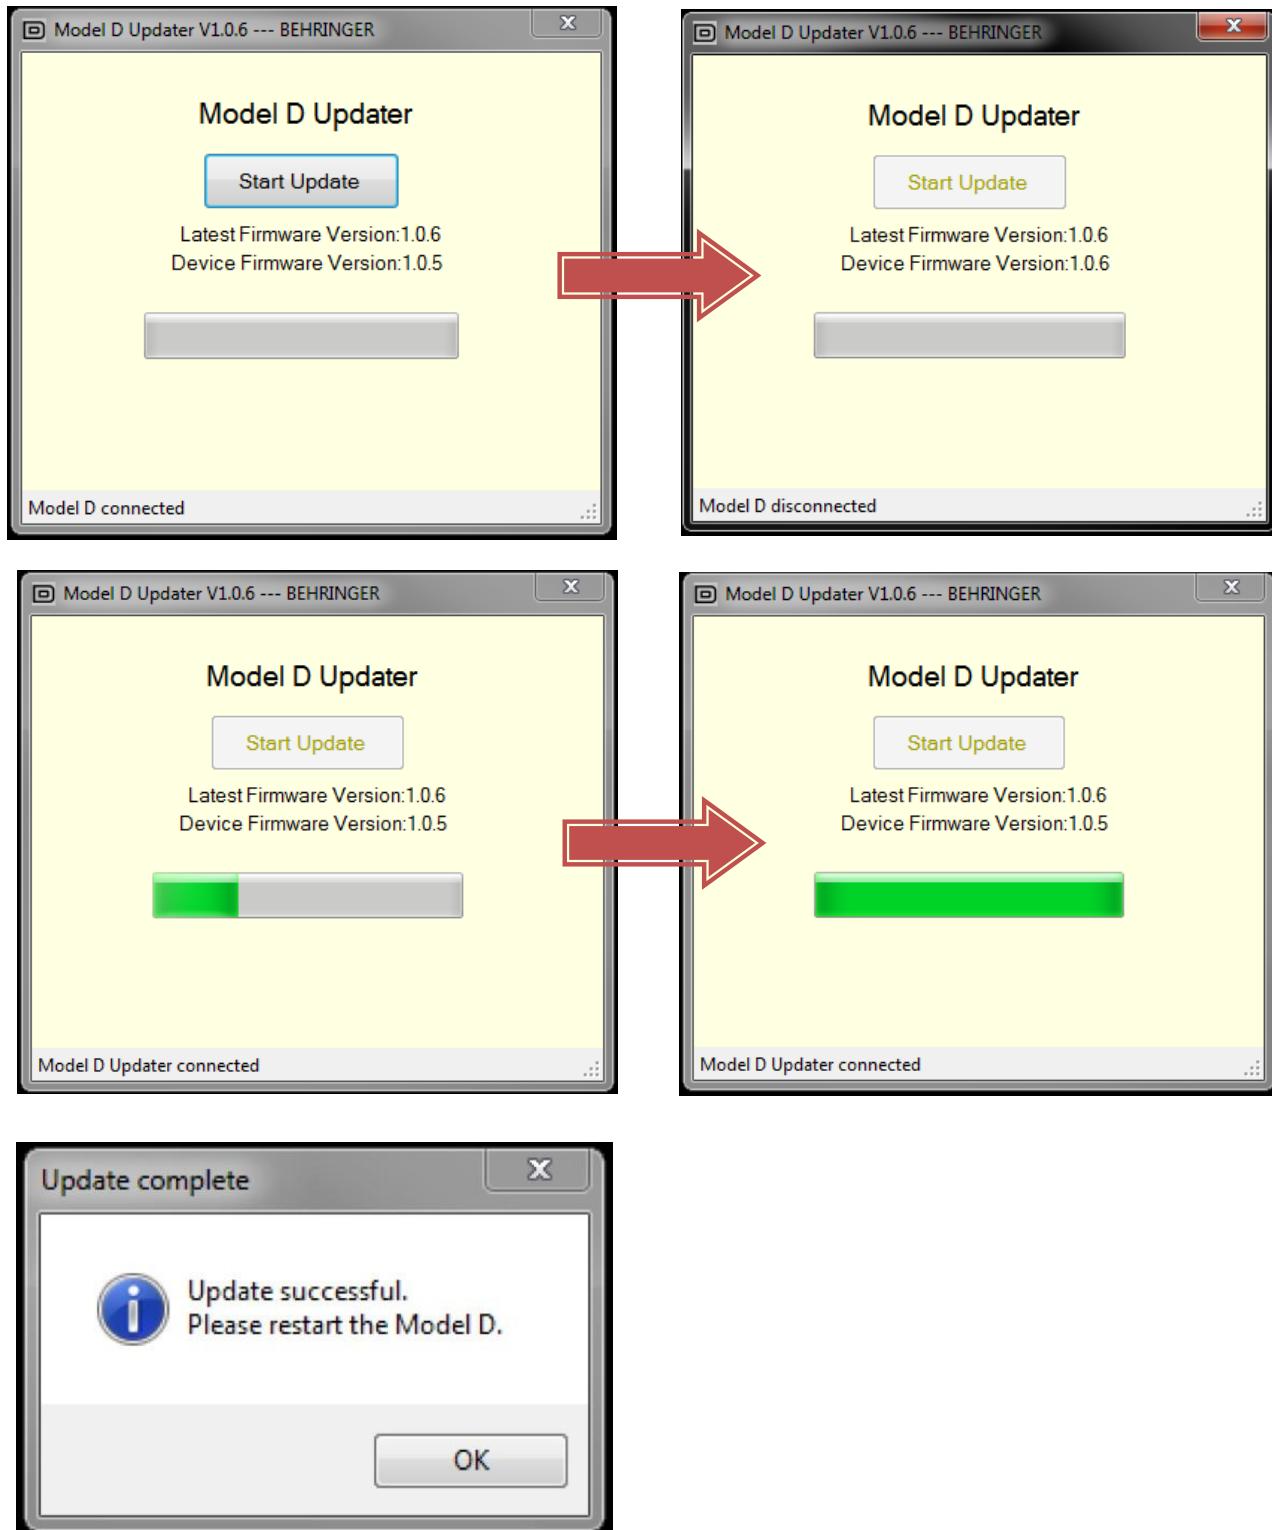



6. When the Updater tool completes you will see that the update bar will be a “solid” green and a notification “Update Successful. Close Model D Updater and restart the device!” as the instruction mentions please restart the Model D.

7. To check that the update has completed, close the Model D Firmware Updater and re-open it. You will now see that the update completed and displays “Device Firmware Version: 1.0.6”

