

## Behringer P16-M

### Firmware Version 1.06 (28 Feb 2023)

This firmware is the latest official version.

It fixes a memory problem with some devices.

If you have no issues, you don't need to update.

Update procedure:

1. Power on while holding LINK+STORE buttons together  
(to enter the firmware update mode)
2. The current firmware is displayed briefly by the channel button LEDs  
(example: red button LED 1 + green button LED 5 means firmware version 1.05)
3. Release now LINK+STORE buttons
4. Connect MIDI IN on P16-M via MIDI cable to the MIDI OUT of your USB MIDI interface
5. Go sure that your USB MIDI interface is connected to your PC/Mac via USB cable and – if required – the necessary driver is installed
6. Open any MIDI dump program (such as SendSX or MIDI OX), and select your USB MIDI interface
7. Open the MIDI SysEx file (file name ends with ".syx") and send it to the MIDI OUT port of your interface
8. While firmware update, the green button LEDs will light up, one after the other, from first button LED 1 to the last LED 16
9. When update is finished, the device will re-start automatically with the new firmware, which will be briefly displayed by the channel button LEDs
10. Congratulations, your P16-M is now updated!