

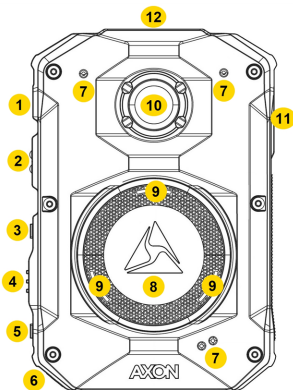 
Axon Body 4 Camera



QUICK
START
GUIDE

For detailed user guides, video walk-throughs, and training, go to <https://my.axon.com/s/axon-body-4> (QR code above).

Camera controls



1. Programmable Button 1
2. Programmable Button 2
3. Volume up
4. Select
5. Volume down
6. Power
7. Microphone (4)
8. Event
9. Triad LED (3)
10. Lens
11. POV port
12. Operation LED (top)

Docking

Place your camera in your Axon Dock to charge the battery, offload videos, and download system updates. Ensure the USB port is dry and free of dirt and debris before placing the camera in a dock or connecting a USB-C cable.

Battery

Depending on organization settings, your camera may only charge to 90% and display **Full** to preserve battery health; this is not an error.

Water

If your camera contacts water, ensure it is completely dry before docking or connecting any accessories, including the USB cable, magnetic disconnect cable, or Flex POV camera cable. A water droplet icon indicates moisture detected in the side POV port or bottom USB-C port.

Button actions

| Action | Button Presses |
|-----------------------|---|
| Lights | Press Volume Up ▲ for three second, then tap to toggle modes |
| Marker, add | Press Select while recording |
| Menu | Double-press Select |
| Mute on/off | Press Select for three seconds while recording; or, double-press Event to exit |
| Pairing | Press Event+ Select simultaneously |
| Power off | Press Power for three seconds |
| Power on | Press Power until short vibration |
| Programmable Button 1 | Double-press Programmable Button 1 (default: Watch Me) |
| Programmable Button 2 | Single-press or long-press Programmable Button 2 , depending on how device behavior is set |
| Recording, start | Double-press Event |
| Recording, stop | Press Event for three seconds |
| Sleep mode, enter | Press Power then Select to confirm |
| Sleep mode, exit | Press Power or start a recording |
| Stealth mode, enter | Press Volume Down for three seconds* |
| Stealth mode, exit | Press Volume Up ▲ or Volume Down ▼ for three seconds* |
| Volume, speaker | Press Volume Up ▲ or Volume Down ▼ |

* The camera remembers the previous volume and light settings when exiting Stealth mode.

Programmable buttons

Programmable Buttons 1 and 2 are agency-configurable. Activate Button 1 with a double-press. Activate Button 2 with either a single press or long press, depending on the configuration.



Icons during use









 




 
 

1. Status Bar
2. Activity Area

| Status Bar Icon | Description |
|-----------------|--|
| 58% | Battery capacity |
| | Battery charging |
| | Battery not charging due to high temperature. The camera will continue to operate normally and resume charging when the camera cools down. |
| | Battery low ($\leq 10\%$); Operation LED blinks red |
| | Camera paired |
| | Lights off |
| | Moisture detected in the side POV port or bottom USB-C port. The camera will continue to operate normally, but ensure it is dry before docking or connecting a POV module. |
| | Stealth mode on |

| Activity Area Icon | Description | Operation LED |
|----------------------------|--|-----------------------------|
| | Axon Respond Livestreaming* | Blinking purple |
| | Axon Respond Voice Comms* | Blinking purple |
| | Axon Respond Voice Comms, participants* | Blinking red |
| L-READY or R-READY | Buffering with POV (right/left orientation)* | Blinking green |
| STORAGE ALMOST FULL | Memory is 85% full | Blinking red (recording) |
| STORAGE FULL | Memory is 95% full; recording stops | Blinking red (recording) |
| | Microphone off (mute mode) | Blinking blue |
| PAIRING READY | Pairing mode* | Blinking blue |
| | Ready (Buffering) mode | Blinking green (also Triad) |
| | Recording | Blinking red (also Triad) |
| | Recording started by Axon Signal* broadcast | Blinking red |
| | Recording with POV (right/left orientation)* | Blinking red |
| | Sleep mode* | Off |
| n/a | Startup or shutdown | Solid red |
| | Watch Me* | Blinking red |

* May not be enabled at your organization.

Icons when docked

| Display | Description | Triad LED |
|--|---|---|
| 58%  | Battery capacity | |
|  | Battery charging – Triad LED colors reflect the charge level. |  Green: > 90%  Yellow: 11-89%  Red: <10% |
| DEVICE ERROR # | Device error #. Refer to the common codes in the user guide. |  Blinking red |
| Firmware v.1.15.0 Updated 8/18/2022 | Firmware update complete – Displayed for 10 seconds after the update is complete and for 10 seconds after undocking. |  Spinning white during installation |
| NETWORK ERROR | Network error – Check network connection, see device page in Axon Evidence and troubleshooting instructions at help.axon.com . |  Blinking red and green |
|  15 | Number of videos on camera | n/a |
|  | Updating firmware or settings – Camera will resume normal operation after update. Operation LED solid white. Display may also show UPDATING. |  Spinning yellow |
| USERID123 | User/Badge ID – Displays right after docking, when the camera is charging, for 10 seconds after undocking, and when no other activity is in progress. | n/a |
|  15/100 97%  18.2 Mbps 15% [1h 40m left] | Uploading video – Displays video being uploaded (here 15) of total on the camera (100), upload speed (18.2 Mbps), percentage complete (99%), and time remaining for the upload (1h 40m). |  Spinning yellow |

End recording confirmation

This feature prevents unintentional ending of recordings. If enabled, ending a recording requires a second press of **Select**. This is agency-configurable between (1) always required and (2) only required if **Event** is pressed during a recording.

Axon View (iOS or Android)

Use the Axon View mobile app to play video and add metadata (case ID, title, and category). Axon View can share highly accurate mobile phone location with Axon Body 4. Axon recommends setting Axon View location permissions to **Always** to use this capability.

1. Open Axon View, select an Axon Body 4 camera, sign into your Axon Evidence account, and tap **Initiate Pairing**.
2. With the camera powered on, press **Select** and **Event** at the same time.
3. Follow the on-screen instructions on the Axon View application to pair your camera to Axon View.

Axon View XL Standalone (Windows)

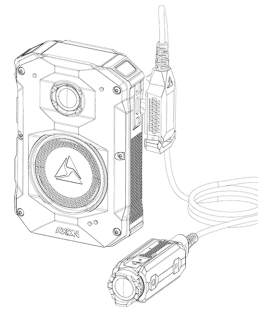 
Use the ViewXL Standalone desktop app to play video and add metadata. Administrators can use View XL Standalone to register and assign cameras.

After signing into Axon View XL and selecting Standalone Mode, connect the camera to the computer using an Axon-supplied USB-C cable.

Flex POV camera

Register and assign a Flex POV module by scanning the QR code on the side of the module with Axon Device Manager (ADM).

The Flex POV Module and the Axon Body 4 Camera work with a purpose-built cable with a smaller, straight connector at one end and a larger, right-angle connector at the other. Unlock the POV latching mechanism and insert the connector into the camera's connector port with the cable pointing up as shown, then lock it in place by pushing up on the locking mechanism until it's flush with the rest of the connector.



When connected to a camera for the first time, it will prompt to set the POV orientation; see the R or L on the top of the module when mounted. To change orientation, double-press **Select** and select POV Orientation. Or, use the Axon View mobile app.