

 


TASER CAM HD Quick Start Guide


English (U.S./Canada/Australia/U.K.)

	WARNING
	Energy Weapon <ul style="list-style-type: none"> • Can temporarily incapacitate target. • Can cause death or serious injury. • Obey warnings, instructions and all laws. • Comply with current training materials and requirements. • See www.axon.com

Hardware

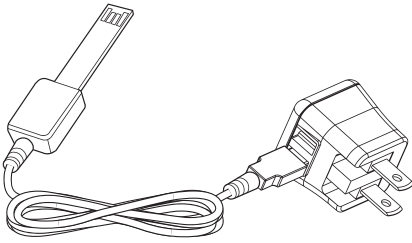

Wall Charger

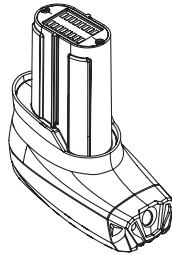 

TASER CAM HD

Quick Reference

This quick start guide is for reference only. (The *TASER CAM HD Operating Manual* is available at www.axon.com.) Read, study, understand, and follow all instructions, product manuals, warnings, information, training bulletins, and Axon training materials before using the TASER CAM HD system. Failure to comply could result in injury, system malfunctions, or loss of data.

The TASER CAM HD recorder is an optional accessory for use with any TASER X2 or X26P energy weapon. The TASER CAM HD system, with its microphone and light-sensitive camera, adds to the energy weapon the ability to record audio and video. It is also rechargeable.

The TASER CAM HD recorder works with Evidence Sync software to download audiovisual files onto a local computer or server and store them in a searchable library. Files may also be stored on the Axon Evidence (Evidence.com) website, offering digital storage in a secure, easily accessible environment.

The Automatic Shut-Down (AS) TASER CAM HD recorder also is available. Installing the Automatic Shut-Down recorder changes the energy weapon's programming to emit an audible alert 2 seconds before the end of the output cycle and automatically stop the output cycle at 5 seconds, even if the trigger is continuously depressed.

Depending on how the Automatic Shut-Down recorder is configured, an ARC switch discharge on an X2 energy weapon may stop after 5 seconds. Replacing the Automatic Shut-Down recorder with a non-AS battery pack will reset the energy weapon and remove the shut-off and audio alert features.

The optional Automatic Shut-Down TASER CAM HD recorder is designed to emit a warning sound 2 seconds before the end of the energy weapon's energy burst at 5 seconds. Under stressful situations, audio exclusion might prevent you from hearing the alert from the Automatic Shut-Down TASER CAM HD recorder.

- DO NOT insert the TASER CAM HD recorder into an energy weapon until the recorder is fully charged.
- NEVER insert the TASER CAM HD recorder into an energy weapon while the TASER CAM HD is connected to a computer or wall charger.
- NEVER disconnect the TASER CAM HD recorder from the USB download cable during a firmware update, whether you are updating the recorder or energy weapon.
- DO NOT open the TASER CAM HD recorder's battery compartment unless you have read the *TASER CAM HD Recorder Operating Manual*, available at www.axon.com, au.axon.com, uk.axon.com.


Step 1: Installing Batteries in the TASER CAM HD Recorder

NOTE: The batteries are packaged separately from the TASER CAM HD recorder and must be installed into the recorder. See the *TASER CAM HD Battery Replacement Guide* at www.axon.com for full information.

Do not install the batteries in the TASER CAM HD recorder unless you have been trained to do so.

- 1 Use the Torx T5 flag driver to remove the two screws in the top of the unit.

Using any tool not specifically designed for Torx fasteners may damage the screws and/or the TASER CAM HD recorder.

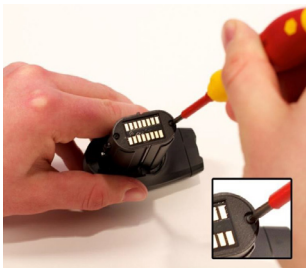

- 2 Carefully remove the plastic cover.
- 3 Insert the new battery into the battery well.
The wires on the battery should be on the side closest to the camera lens.

- 4 Plug the battery into the slot on the battery connector board.



- 5 Close the top and ensure it is correctly positioned in place.

Be careful not to pinch the wires or flexible flat cable.





- 6 Use the Torx screwdriver to reinstall the two screws.

Be careful not to over tighten the screws, as this may strip out the plastic.

Step 2: Charging Batteries in the TASER CAM HD Recorder

The TASER CAM HD recorder must be fully charged, before the TASER CAM HD recorder is inserted into an energy weapon.

- 1 Remove the dataport plug on the TASER CAM HD recorder.
- 2 Connect the power cable to the TASER CAM HD recorder. When inserting the power cable, it is important that the gold tabs face forward toward the camera lens.
- 3 Connect the power cable to a wall outlet.
- 4 A green light near the TASER CAM HD lens will flash to indicate charging is in progress.
- 5 When charging is complete, the green light will remain steady.
- 6 After unplugging the charging cable from the TASER CAM HD recorder, remember to replace the dataport plug on the TASER CAM HD recorder to prevent damage from any debris or moisture.

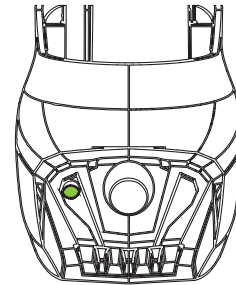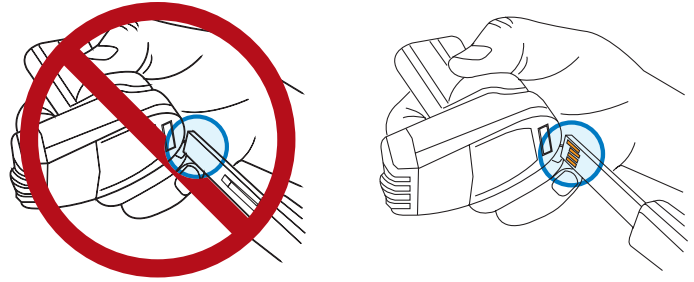

Step 3: Installing the EVIDENCE Sync Software

Detailed instructions for using TASER CAM HD recorder and other TASER products with Evidence Sync are available in the *Evidence Sync User Manual* (www.axon.com, au.axon.com, uk.axon.com).

Step 4: Installing the TASER CAM HD Recorder

NOTE: Install the Evidence Sync software, update the energy weapon's firmware, and configure your TASER CAM HD recorder before attempting to use it with the energy weapon. See the *TASER CAM HD Recorder Operating Manual* for more information.

- 1 Disconnect the TASER CAM HD recorder from the computer or wall power and remove the charging cable.
- 2 Confirm that the safety on the energy weapon is in the down (SAFE)

position.

- 3 Remove the cartridge(s) from the energy weapon. (See the energy weapon's user manual for more information on unloading cartridges.)
- 4 Firmly insert the TASER CAM HD recorder in the energy weapon until it clicks and the energy weapon ejector button pops out completely.

Quick Reference: CID Displays

(If you do not see the TASER CAM HD icon, please ensure that your energy weapon has the most up-to-date firmware.)

NOTE: These drawings depict an X2 CID. An X26P CID will not have an operating mode icon in the lower-left corner of the CID. The TASER CAM and battery icons are the same on X2 and X26P CIDs.



The TASER CAM HD icon displays in the upper-left corner of the CID.




The TASER CAM HD recorder is configured with the Auto Shut-Down feature.



A flashing CID indicates the camera lens is covered.

For more information, see the *TASER CAM HD Recorder Operating Manual*, available at www.axon.com, au.axon.com, uk.axon.com. Or call Axon customer service at 1-800-978-2737 to obtain a copy.

Torx is a trademark of Acumen Global Technologies.

Axon, Axon Evidence, Evidence Sync, TASER, X2, X26P, and  are trademarks of Axon Enterprise, Inc., some of which are registered in the US. and other countries. For more information, visit www.axon.com/legal. All rights reserved. © 2021 Axon Enterprise, Inc.

MPC0142 Rev: E September 2021