

Axon Signal Sensor First-time user training path

This training path outlines the recommended learning sequence for using Axon Signal Sensor. Follow the phases that apply to your role to build foundational knowledge and progress to advanced configuration, troubleshooting, and monitoring.

Who should complete which phases

- **New end users:** Complete Phases 1 and 2.
- **Admins and power users:** Complete Phases 1–5 for full operational readiness.

Phase 1: Orientation and setup

Required for all users

- [Introduction](#): Overview of purpose and warnings
- [Operating modes and body camera](#): What LED colors mean and how SSR works with your Axon Body camera
- [Quick Start Guide](#): Basic setup and operation steps for end users

Phase 2: Core operation

Required for all users

- [Mute mode](#): Draw a weapon without sending a signal
- [LED indicators](#): Understand status lights and behaviors
- [Operational modes](#): How to use Live mode and Mute mode

Phase 3: Calibration and maintenance

For Admin and power users only

- [First-time setup](#): Initial configuration
- [Calibration](#): Make sure accuracy readings and reduce false activations
- [Battery replacement](#): Steps and intervals
- [Mounting bracket installation](#): Choose the right option for your equipment

Phase 4: Troubleshooting and reliability

For Admin and power users only

- [FAQs](#): Solutions for occasional deployment challenges
- **False or missed activations**: See [Calibration](#)

Phase 5: Admin and advanced monitoring

For Admin and power users only

- [View an audit trail](#): Oversight and incident tracking