

TASER Energy Weapon Cleaning Kit Guide

Always ensure that no live cartridges or battery packs are loaded in an energy weapon prior to cleaning or maintenance.

Before cleaning any energy weapon, perform a full data download first.

Cleaning Kit Contents

- 5 Bristle Brushes
- 1 Spray Bottle containing 2 fl.oz. of isopropyl alcohol (70%)
- 1 Eye Protection Glasses
- 1 *TASER Cleaning Kit Guide*




Note: Axon is not permitted to ship alcohol to some locations. If your cleaning kit does not include a spray bottle, please obtain a spray bottle and use it with 70% isopropyl alcohol.

Step 1: Cleaning the exterior of the device

Periodic cleaning of the outside surface area of the TASER energy weapon is recommended. Axon suggests PDI Sanicloth wipes.

Step 2: Cleaning the internal battery contacts of the device

The battery contacts should be cleaned periodically to help maintain the maximum health of the TASER energy weapon and its power source.

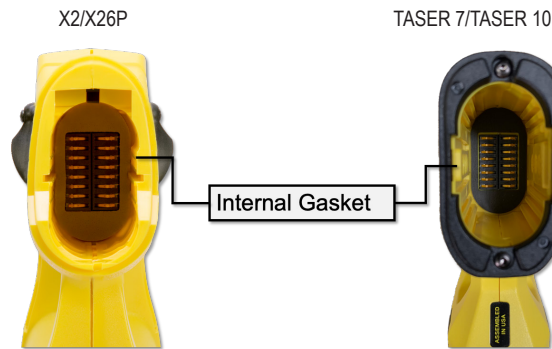

Over time, a small amount of carbon (a black material), oxidation (a white material), or dirt may build up on the contacts. Using the below cleaning techniques will help clean this material off and help ensure proper contact between the battery and TASER energy weapon.

- 1 Lightly spray the end of the bristle brush with the isopropyl alcohol.



Avoid using too much alcohol while cleaning. Dab the brush on a cloth after using the alcohol dispenser.

- 2 Gently brush the contact pins with the brush.
Do NOT push the brush into the unit with any pressure, doing so may damage the contacts.
- 3 When cleaning the internal battery contacts, hold the TASER energy weapon and elevate the brush so that any excess fluid runs away from the battery compartment.




- 4 Wipe the brush on a clean cloth to remove any residue.
- 5 Allow time for the alcohol to dry before placing the battery pack back into the weapon.


Take care not to bend the battery contacts as this can disable the energy weapon.

Step 3: Cleaning the cartridge firing pin contacts

- 1 Locate the firing pins at the end of bay 1 and bay 2 of the TASER weapon (X2 and TASER 7), or the 20 firing pins in the front of the TASER weapon (TASER 10).

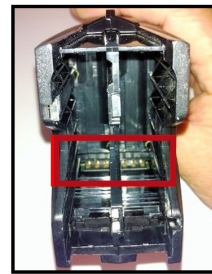

X2

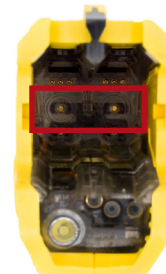


TASER 7



TASER 10

- 2 Lightly spray the end of the bristle brush with the isopropyl alcohol.

Avoid using too much alcohol while cleaning. Dab the brush on a cloth after using the alcohol dispenser.

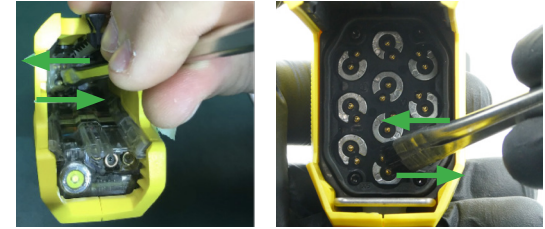


TASER 7

TASER 10

- 3 Stroke the firing pins from left to right for 10 seconds being sure to cover the entire pin with the bristle brush.
- 4 Wipe the brush on a clean cloth to remove any residue.
- 5 Allow time for the alcohol to dry before use.

Notes:

- When cleaning a TASER 7 energy weapon, ensure you are only cleaning and making contact with the firing pins NOT the ground pins.

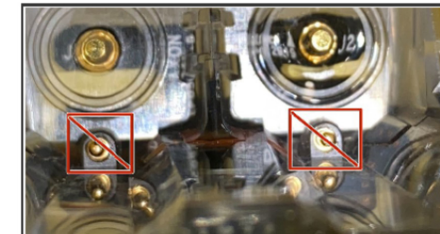

- Do not attempt to insert any other foreign objects into the cartridge bays or damage to the contacts may occur.
- Cleaning cartridge firing pin contacts on a TASER energy weapon can repair cartridge bay errors in certain instances.
- Over time the firing pins will not stay 100% clean and gold plated. It is expected that dirt, material, and dings occur over time and many deployments. This cleaning process is to help maintain maximum health of TASER energy weapons.

- 6 Perform a function test with cartridges inserted to ensure the weapon is working properly. See the user manual for the energy weapon being cleaned for instructions.
- 7 **Repeat the above steps annually to maintain the highest performance of your TASER energy weapons.**

Third-party trademarks are the property of their respective owners.

▲, ▲ AXON, Axon, TASER, TASER 7, TASER 10, X2, X26P, and Ⓜ are trademarks of Axon Enterprise, Inc., some of which are registered in the US and other countries. For more information visit www.axon.com/legal. All rights reserved. © 2024 Axon Enterprise, Inc.

