

Axon Handgun VR Controller (VR19H)



**QUICK
START
GUIDE**

 
For detailed user guides, video walkthroughs, and training, go to <https://my.axon.com/s/axon-vr-training> (QR code above).

Simulated weapon

White VR controllers are only for use in virtual reality (VR) training environments. They neither accept ammunition nor fire like a duty weapon.



Controller features

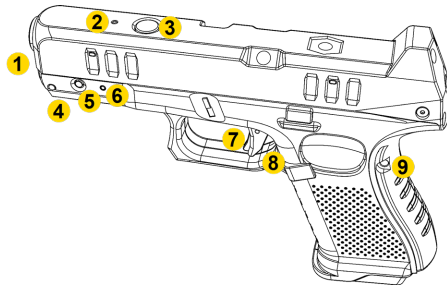



The controller includes a charging cable at the bottom of the box. Features of the controller include:



1. USB charging port (front, not visible)
2. Pairing LED
3. App button
4. Picatinny rail (underneath)
5. Power button
6. Status LED
7. Trigger safety
8. Trigger
9. Backstrap pin hole, one each side



Charging information

 
The controller's charging port is located at the front beside the barrel opening. Charge with any powered USB port. The Status LED blinks white  while charging and turns solid white  at full charge. The controller can't be used during charging.

Whenever powered on, the Status LED flashes to indicate battery level: green  (over 50%), yellow  (50–15%), orange  (14–5%), or red  (<5%).

Trigger and LEDs

The Status LED indicates trigger safety and trigger engagement.



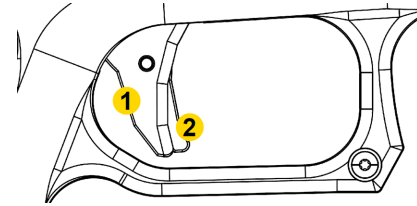


- Pull the trigger safety: Status LED is blue .
- Pull the trigger safety and the trigger: Status LED is purple .




1. Trigger
2. Trigger safety

If the controller enters sleep mode to conserve battery, all LEDs turn off. If this occurs, press **Power** to reactivate it.

Pair the controller and headset

1. Turn the headset on by pressing **Power** for about five seconds. It opens to the Library.
2. Select **Axon VR Training** and acknowledge the messages to initiate pairing.
3. Press **Power** to wake up the controller. The Pairing LED is blue .
 - If green , it's already paired.
 - If not on, or the Status LED is red , charge the controller prior to pairing.
4. Wait three seconds for internal systems to fully power on.
5. Press **App** firmly (so it clicks) until the Pairing LED starts flashing blue , or about three seconds.
6. When the controller and headset are paired, the Pairing LED turns green .

If pairing fails, the Pairing LED remains blue . If the LED turns off, press **Power** and retry step 4. Holding **App** too long puts the controller into Sleep mode. The controller remains paired to the headset even if turned off.



When the Pairing LED is flashing blue ■■■■ and red ■■■■, the controller is receiving a firmware update. Do not press **Power** during the update.

Note: This controller is not used in CET or Arena training.



 
For detailed user guides, video walkthroughs, and training, go to <http://axon.com/vr-setup> (QR code above).

Simulated weapon

White VR controllers are only for use in virtual reality (VR) training environments. They neither accept ammunition nor fire like a duty weapon.

Controller features

The controller includes a charging cable at the bottom of the box. Features of the controller include:

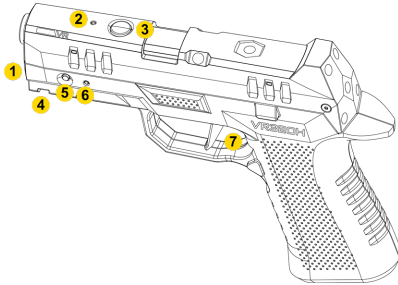

1. USB charging port (front, not visible)
2. Pairing LED
3. App button
4. Picatinny rail (underneath)
5. Power button
6. Status LED
7. Trigger

Charging information

The controller's charging port is located at the front beside the barrel opening. Charge with any powered USB port. The Status LED blinks white ■■■■ while charging and turns solid white ■■■■ at full charge. The controller can't be used during charging.

Whenever powered on, the Status LED flashes to indicate battery level: green ■■■■ (over 50%), yellow ■■■■ (50–15%), orange ■■■■ (14–5%), or red ■■■■ (<5%).

Trigger and LEDs

If the controller enters sleep mode to conserve battery, all LEDs turn off. If this occurs, press **Power** to reactivate it.

Pair the controller and headset

1. Turn the headset on by pressing **Power** for about five seconds. It opens to the Library.
2. Select **Axon VR Training** and acknowledge the messages to initiate pairing.
3. Press **Power** to wake up the controller. The Pairing LED is blue ■■■■.
 - If green ■■■■, it's already paired.
 - If not on, or the Status LED is red ■■■■, charge the controller prior to pairing.
4. Wait three seconds for internal systems to fully power on.
5. Press **App** firmly (so it clicks) until the Pairing LED starts flashing blue ■■■■, or about three seconds.
6. When the controller and headset are paired, the Pairing LED turns green ■■■■.

If pairing fails, the Pairing LED remains blue ■■■■. If the LED turns off, press **Power** and retry step 4. Holding **App** too long puts the controller into Sleep mode. The controller remains paired to the headset even if turned off.

When the Pairing LED is flashing blue ■■■■ and red ■■■■, the controller is receiving a firmware update. Do not press **Power** during the update.

Note: This controller is not used in Community Engagement Training.



 
For detailed user guides, video walkthroughs, and training, go to <http://axon.com/vr-setup> (QR code above).

Simulated weapon

White VR controllers are only for use in virtual reality (VR) training environments. They neither accept ammunition nor fire like a duty weapon.



Controller features

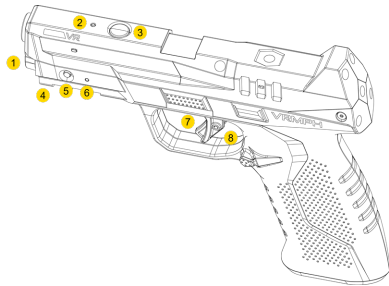



The controller includes a charging cable at the bottom of the box. Features of the controller include:





1. USB charging port (front, not visible)
2. Pairing LED
3. App button
4. Picatinny rail (underneath)
5. Power button
6. Status LED
7. Trigger safety
8. Trigger

 
Charging information

The controller's charging port is located at the front beside the barrel opening. Charge with any powered USB port. The Status LED blinks white  while charging and turns solid white  at full charge. The controller can't be used during charging.

Whenever powered on, the Status LED flashes to indicate battery level: green  (over 50%), yellow  (50–15%), orange  (14–5%), or red  (<5%).

Trigger and LEDs



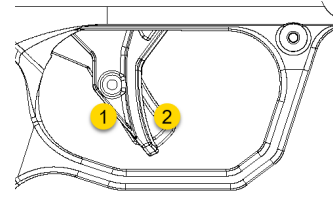


- **Pull the trigger safety:** Status LED is blue .
- **Pull the trigger safety and the trigger:** Status LED is purple .






1. Trigger
2. Trigger safety

If the controller enters sleep mode to conserve battery, all LEDs turn off. If this occurs, press **Power** to reactivate it.

Pair the controller and headset

1. Turn the headset on by pressing **Power** for about five seconds. It opens to the Library.
2. Select **Axon VR Training** and acknowledge the messages to initiate pairing.
3. Press **Power** to wake up the controller. The Pairing LED is blue .
 - If green , it's already paired.
 - If not on, or the Status LED is red , charge the controller prior to pairing.
4. Wait three seconds for internal systems to fully power on.
5. Press **App** firmly (so it clicks) until the Pairing LED starts flashing blue , or about three seconds.
6. When the controller and headset are paired, the Pairing LED turns green .

If pairing fails, the Pairing LED remains blue . If the LED turns off, press **Power** and retry step 4. Holding **App** too long puts the controller into Sleep mode. The controller remains paired to the headset even if turned off.

When the Pairing LED is flashing blue  and red , the controller is receiving a firmware update. Do not press **Power** during the update.

Note: This controller is not used in Community Engagement Training.