

1. COMPLETE TRAINING FIRST!

The TASER 10 energy weapon operates differently than previous generation energy weapons, especially when using the selector switch and trigger.


2. CONFIRM THE ENERGY WEAPON IS READY FOR USE

Check with your TASER Program Coordinator to be sure firmware is up to date, the energy weapon has the correct set-up for your agency, the battery is fully charged, and that the weapon, magazine, and battery packs have been properly assigned to you.

INSERT THE BATTERY

3. A. Insert the battery pack into the weapon. Press firmly until you hear the latch on both sides of the battery pack "click."

When a new battery pack is inserted into the handle it will automatically synchronize the weapon's logs to the battery pack and may update the energy weapon firmware. **Do not remove the battery pack or perform any other action with the energy weapon until the icon disappears from the CID** (this may take several minutes).

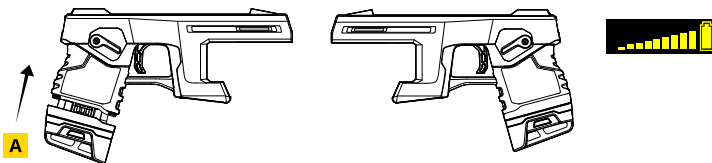


4. LOAD THE MAGAZINE WITH CARTRIDGES

TASER 10 magazines are available in a variety of different types and colors. The color identifies the intended use for the magazines. Only black magazines are intended for duty use. See the *TASER 10 Energy Weapon User Manual* for information about other magazines and cartridges.


- A. Point the front of the magazine in a safe direction at all times.
- B. Slide the cartridge with the front facing away from you, front-first into the back of the chamber until the cartridge is fully seated. Repeat until all cartridges are loaded. Ensure the cartridges are seated evenly in the magazine. Look at the magazine from the side to confirm proper cartridge placement.

Never place your hands, fingers, or other body parts in front of the magazine while it is loaded in the TASER 10 energy weapon.

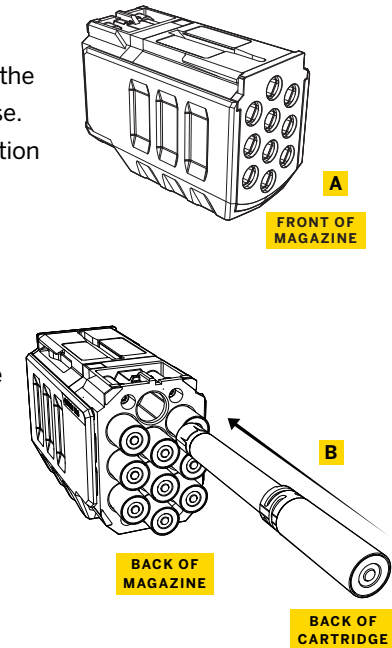

LOAD THE MAGAZINE INTO THE WEAPON


5. A. While gripping the magazine from the bottom, align the guides on the magazine with the rails on the weapon. Slide the magazine approximately halfway towards the back of the weapon before pushing upward.
- B. Push the magazine into the magazine well until you hear a "click."
- C. Visually inspect to ensure the magazine is properly aligned and fully seated into the magazine well of the weapon, and there is no gap between the magazine and weapon. Gently tug on the magazine to ensure it is fully seated.

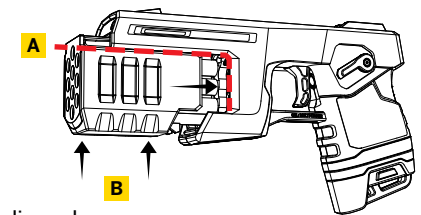

6. UNDERSTANDING THE SELECTOR SWITCH

The TASER 10 energy weapon has a 4-position multifunction switch that is used for different operating modes including power on and off.


- Press up = Warning Display or Re-energize
- On = Up (ARMED)
- Off = Down (SAFE)
- Triple press down = Stealth Mode
- Press down and hold for three seconds = Function Test Mode

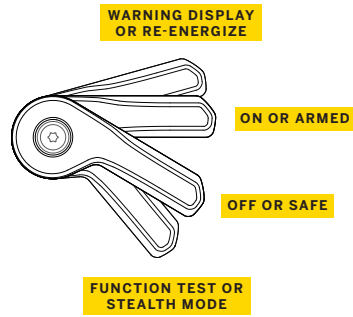

7. TURN THE WEAPON ON AND OFF

After loading the weapon:



- Point the weapon in a safe direction.
- Move the safety to the up (ARMED) position.
- Confirm the CID displays all the cartridges.
- Move the selector switch to the down (SAFE) position.

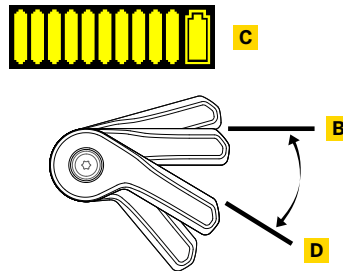

8. FUNCTION TEST THE WEAPON


After loading the weapon:

- Point the weapon in a safe direction.
- Press the selector switch down and hold it for three seconds until the CID illuminates blue in color, the CID displays the test icon, and the side lights turn blue.
- Move the selector switch to the up (ON) position.
- Wait for the weapon to conduct the test.
 - The Check Mark icon will display if the weapon is functioning properly.
 - The Red Error "X" icon will display if the weapon has an error. Return the unit to your agency's administrator for service.
- Turn the weapon off by pressing down on the selector switch.

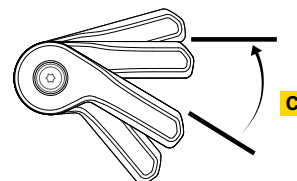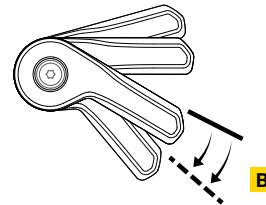

9. REMOVING THE MAGAZINE

- Point the weapon in a safe direction.
Be sure the safety is in the down (SAFE) position.
Do not put your hands in front of the magazine.
- Pull the magazine forward to remove it from the weapon.

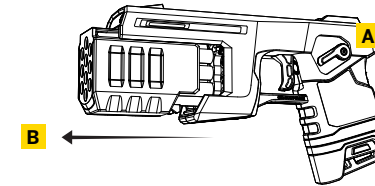

10. RECHARGING THE BATTERY

- Move the selector switch to the down (SAFE) position.
- Confirm the CID is blank.
- Press the two buttons on each side of the battery pack.
- Pull the battery pack out of the weapon.
- Press the battery pack into the dock. You should hear a click when the battery pack is seated properly in the bay. If the battery pack has not been docked in over 30 days, the CID will display a dock icon.

