

Modify a Floor Container perimeter – Floor Mods



Click on **Floor Mods** icon


1 Properties dialog

Type

Box

Set Length & Depth

1

Properties	
Floor Mod	
	
Misc	
Type	Box
Length	8' 2.5/16"
Depth of Box	2'
Invert Floor Mod	No

2



Right Click to toggle the insertion point
Right end, Center, Left End




Left Click to place the Floor Mod



Click Autoframe icon

Frame all or selected framing zones

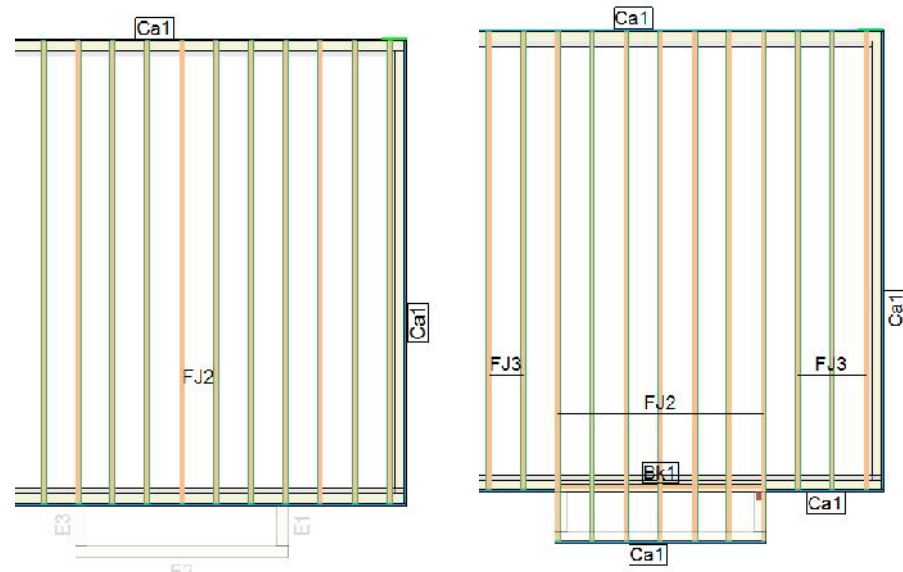

Cantilever req'd below wall above