



## Installation Guide

## Flooring Type

## Installation Method

**RIGID CORE SPC****FLOAT  
(CLICK LOCK)**[Click Or Scan](#)**ACCLIMATION GUIDELINES**

Acclimate for temperature only. Do not open boxes before installation. Only open as many boxes as will be installed that day. Expansion space around the perimeter is required and should be at least 1/2" regardless of flooring thickness.

**WATERSAFE FLOATING FLOOR RECOMMENDATIONS**

This is a floating floor only. The floor must NOT be connected to any part of the house by glue, caulk, or nails. The floor must have proper expansion at ALL vertical obstructions like walls, cabinets, bathroom fixtures, fireplaces, and moldings.

- *The subfloor needs to be level within the guidelines of the product being used.*
- *A moisture barrier (6 mil plastic or roll-on) must be used for flooring going over a slab that is not suspended above a conditioned space.*
- *The side of the flooring must never be hit directly with a mallet.*
- *Use a tapping block against the side edge of the flooring to engage the locking mechanism.*
- *A mallet must be used on some end joints to engage the drop lock mechanism, but this must be done carefully.*

**FLOATING FLOOR EXPANSION SPACE**

For floating installation the minimum expansion space is 1/2" regardless of the thickness of material.

After any 25' span in any direction, add an additional 1/16" expansion space for every additional 3'.

**ALWAYS INSPECT MATERIAL PRIOR TO INSTALLATION**

Installer should carefully inspect material prior to installation. Materials installed with visible defects are not covered by warranty. Any unacceptable materials should not be installed. Rejection of material must be done on the full shipment of product, not box-by-box or piece-by-piece. Our flooring is manufactured within accepted industry standards, which allow deficiencies up to but not exceeding 5%.