

## RAPIDLOCK, KlickFast, and Magnetic Lanyard mount installation

The RAPIDLOCK, KlickFast, and Magnetic Lanyard mounts are fast and secure ways to mount and dismount your body camera. This guide shows how to attach these mounts to your Axon Body 3 or later or Body Workforce camera.

For a complete discussion of your camera, see the Axon product page: <https://my.axon.com/s/resources>.

### Tools

---

The mounting kit includes:

- RAPIDLOCK, KlickFast, or Magnetic Lanyard mount
- MFS0164 screw(s)
- Ampule of red LOCTITE 271


Optionally, an in-lbs torque wrench and T8 screwdriver will make installation easier.

### Installation

---

If you have questions about this process, contact Axon [technical support](#).

1. Clean any debris from the camera's back plate.
2. Rotate a swab with 70% isopropyl alcohol inside the threads, then wait at least 30 seconds to allow residual alcohol to evaporate. Some models have only one screw.

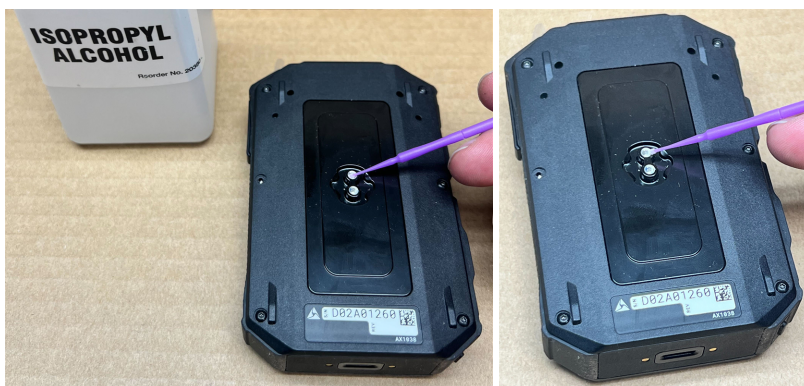

3. Select the mount you want to use.



RAPIDLOCK




KlickFast



Magnetic Lanyard

4. Apply one drop of red LOCTITE 271 to the lower half of the screw threads. Ensure it flows completely around the threads. Apply an additional drop as needed, but no more than two total. **DO NOT** apply to the bottom of the screw. The ampule included in the kit should provide at least 20 drops.

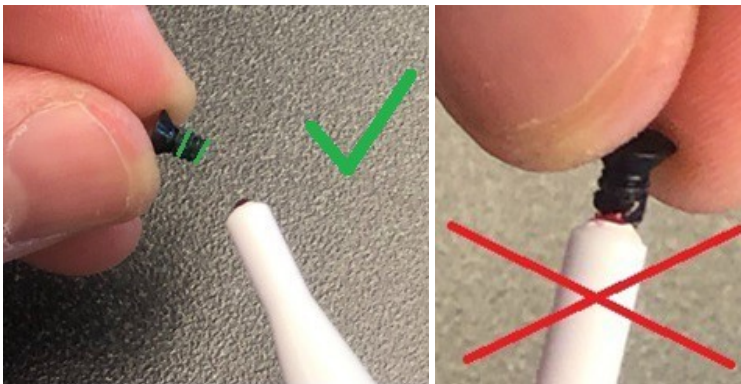

5. Attach the stud (RAPIDLOCK shown below) to the camera with a new MFS0164 screw. Ideally, use a torque driver with T8 bit and torque to 10 in-lbs. Otherwise, use the provided T8 L-handle tool or your Torx screwdriver and tighten the screw until it stops, then a little bit more to snug it down. Do not over-tighten.



6. Let mount cure for 24 hours prior to use. Prior to this, **do not** test-fit onto a mounting base.