




BCI[®]/AJS[®] Rafter Connection to 2x Ceiling Joists

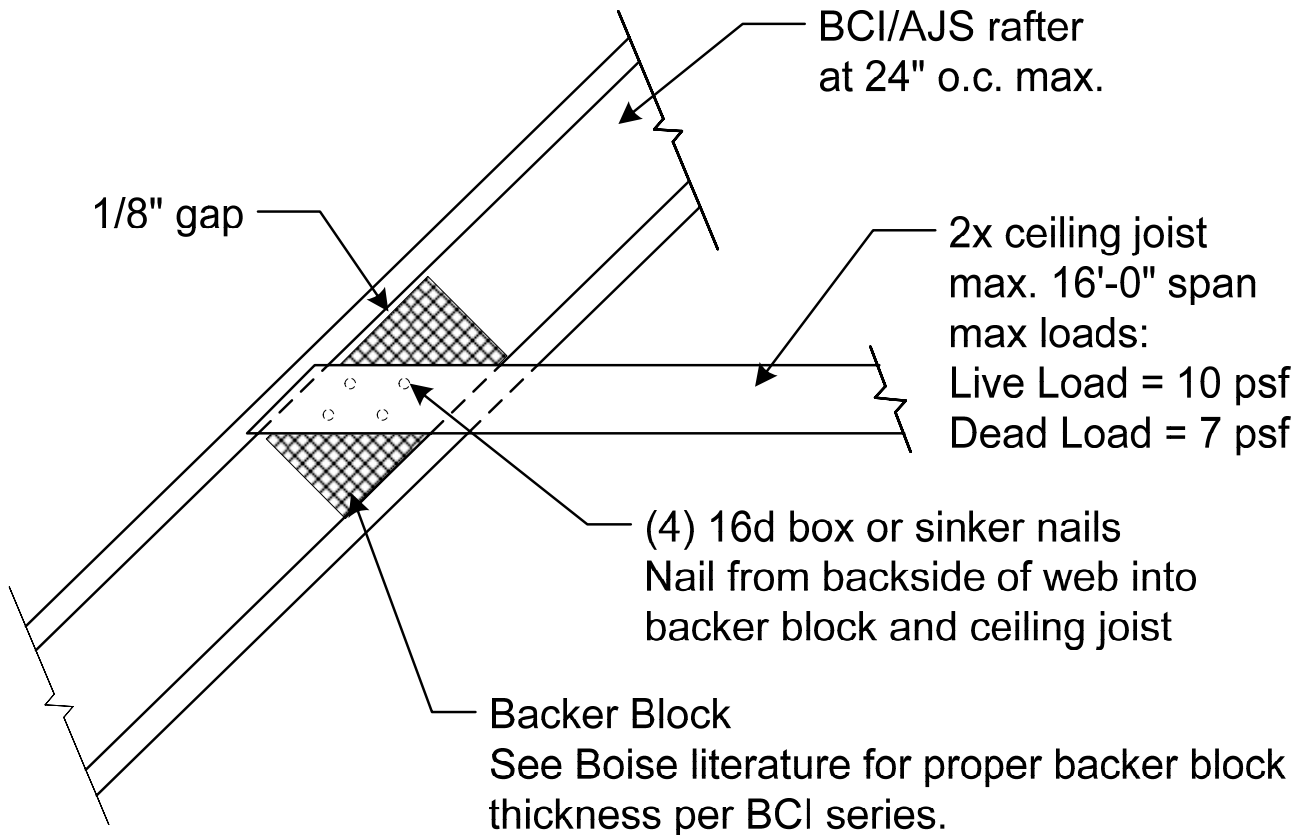

Notes:

- 1) BCI/AJS rafter must have a structural ridge beam or wall for support at upper end.
- 2) Install backer block tight against bottom flange of joist. Use construction adhesive to attach backer block to joist web.