

POWER RELOCATION Installation Instructions

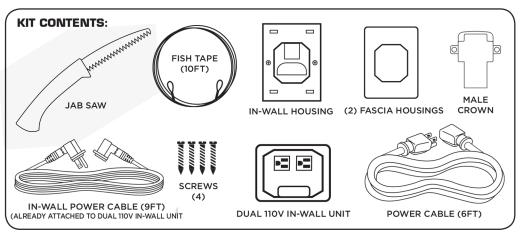


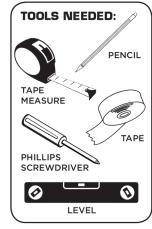









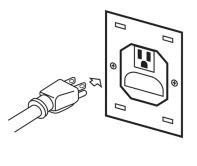

Center between studs

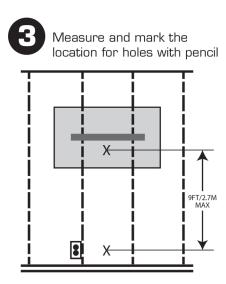


Cut holes with provided Jab Saw






Circular shape for the lower hole (see back shape of the In-Wall Housing unit)

Use Fish Tape to snake the Dual 110V In-Wall Unit Power Cable into the wall with the **Male Tip at the bottom.** Use tape to secure the Fish Tape if needed.

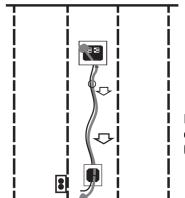




NOTE: Snake any additional AV connection cables at this time. (Coax cable not included)



POWER RELOCATION Installation Instructions











Snap on Male Crown over the Plug Tip and secure with screws.

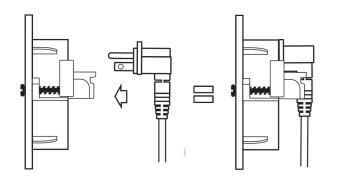


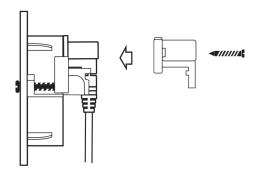


Fold in Dog Ears and slide Housing into wall.
Repeat at the bottom with the Male Housing.




Level and screw Dog Ears until Housing is secure. Repeat at the bottom with the Male Housing.

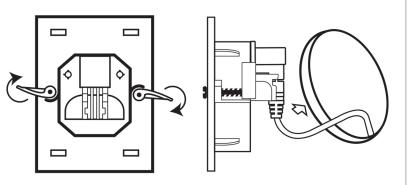

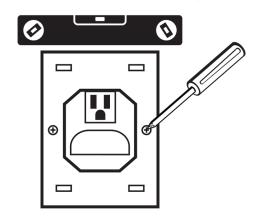

Snap Housing Fascia onto the front of the Housing. Repeat at the bottom with the Male Housing.

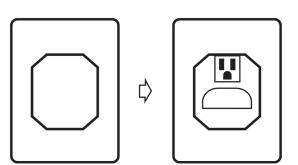

1

Plug Extension Cord into the bottom device. Installation is now complete.

