



Real Wood Floors **requires** the practice of supplemental glue-assist method in nail down applications for The Storehouse Plank Collection of solid, prefinished flooring. We **recommend** it's use with every other Real Wood Floors product.

Directions: A PVA type adhesive shall be applied as a "glue-assist" to flooring boards that are being nailed or stapled down. (Option 1) A 1/8" bead of adhesive may be applied directly to the subfloor 1/2" away from the tongue of the previously installed row of flooring. (Option 2) Alternatively, adhesive may be applied in a 1/8" bead in a serpentine pattern to the underneath side of the board before nailing or stapling down. If a glue-assist method is used, underlayment should **not** be applied to the subfloor. Adhesive should be in direct contact with both the flooring and subfloor.

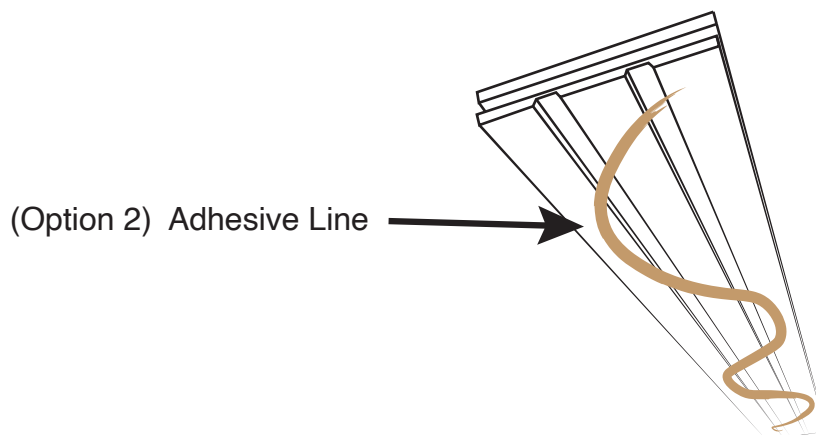

Learn more by
watching the video.

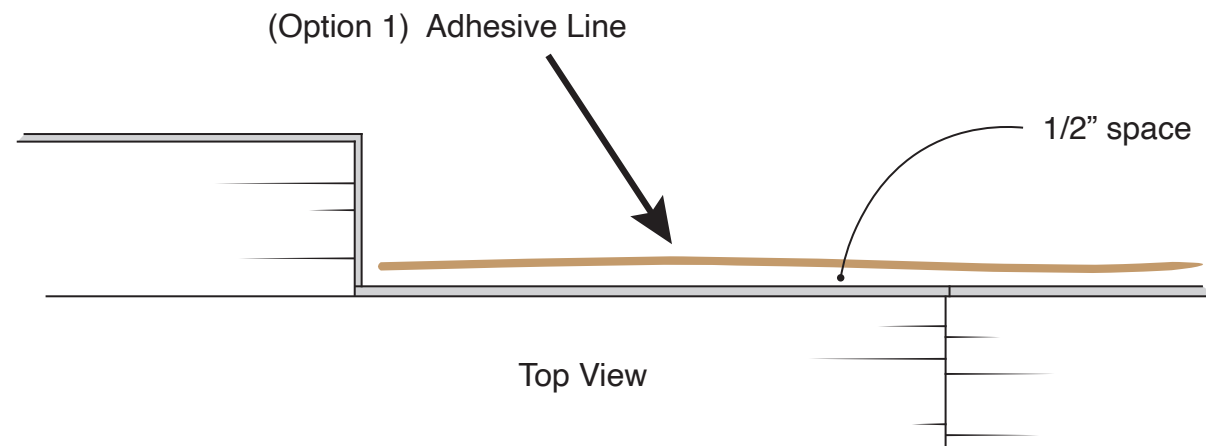

[Click here](#)