

## VIVE Focus Vision




For detailed user guides, video walkthroughs, and training, go to <http://axon.com/vr-setup> (QR code above).


### NOTE

Read, understand, and follow all current instructions, warnings, and relevant Axon training materials before using any Axon system. The most up-to-date warnings and instructions are available at [www.axon.com](http://www.axon.com).


### What's in the box

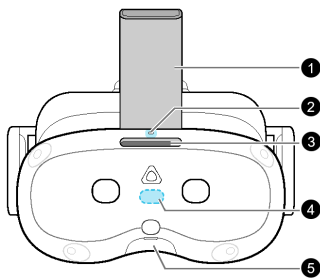


1. Hook and loop fastener
2. Headset status LED
3. Vent
4. IR illuminator
5. USB Type-C port (remove cover)

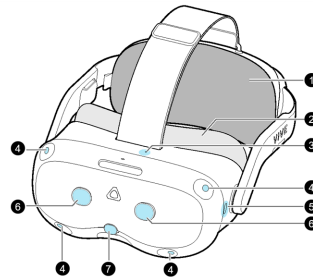


1. Back pad
2. Face cushion
3. Microphone
4. Tracking cameras (x4)
5. Headset button
6. Passthrough cameras (x2)
7. Depth sensor

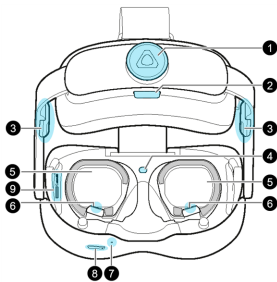

1. Adjustment dial
2. Quick release button
3. Built-in speaker
4. Proximity sensor
5. Lens
6. Eye tracking cameras
7. Microphone
8. Volume control
9. MicroSD card slot

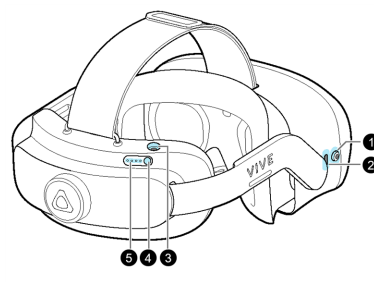


1. 3.5 mm audio jack
2. USB Type-C port
3. Charging port
4. Power button
5. Battery LEDs

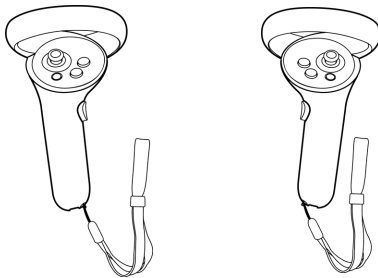


Controller (L)


Controller (R)

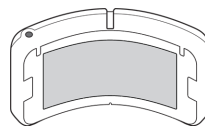


Battery

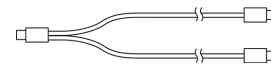

Controller charging cable

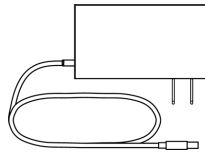

Headset charger

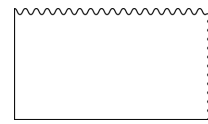


Cleaning cloth


## Install the battery



1. Remove the magnetic padding.

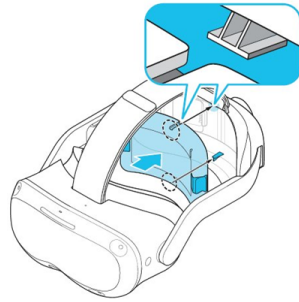

2. Align slots and attach battery.

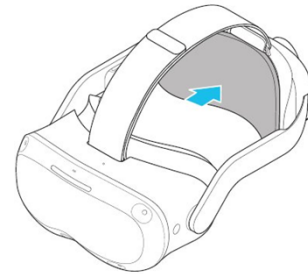

3. Reattach the magnetic padding.

## Check headset charge

Quickly press and release the **Power** button to illuminate the battery indicator. One to four lights will appear, with four lights indicating a full charge.

## Power on/off the headset

To power on or off the headset, press the **Power** button for approximately three to five seconds. If the headset doesn't turn on, it may need to charge.

## Insert a microSD card

You can add extra storage to your VR headset by using a microSD card. Insert the microSD card prior to launching an app.

## Adjust headset volume

You can adjust the volume within the Settings menu or by pressing the left and right volume buttons on the bottom of the headset.

## Settings menu

Volume	Adjust the volume by sliding the indicator to the right or left.
Brightness	Adjust the brightness by sliding the indicator to the right or left.
Audio	Adjust microphone and auxiliary headphone settings from a submenu by clicking the arrow > icon. Navigate back to the main menu by clicking the return arrow < at the top of the submenu page.
Language	Select the language for menus and screen text from a submenu by clicking the arrow > icon. Navigate back to the main menu by clicking the return arrow < at the top of the submenu page.

Date & time	Select the appropriate local time zone from a submenu by clicking the arrow > ic on. Navigate back to the main menu by clicking the return arrow < at the top of the submenu page.
Double-click passthrough	Ensure this feature is enabled for a better user experience. Double-click the headset button adjacent to the right eye on the headset to turn on the passthrough cameras.
System update	Displays the current firmware version. Click <b>Check Now</b> to check for updates.