



Axon Fleet 3 Removal Guide

Document Revision: A
October 2021

3M is a trademark of 3M Company

Cradlepoint and IBR1100 are trademarks of Cradlepoint, Inc.

▲, ▲ Axon, Axon Fleet, and Axon Signal Vehicle are trademarks of Axon Enterprise, Inc., some of which are registered in the US and other countries. For more information, visit www.axon.com/legal.

All rights reserved. ©2021 Axon Enterprise, Inc.

Table of Contents

Introduction.....	4
Components to Return.....	4
Component Removal.....	7
Fleet 3 Hub.....	7
Fleet 3 Dual-View Camera.....	9
Fleet 3 Interior Camera	10
Fleet 3 Interior Antenna	11
Axon Signal Vehicle	11
Cradlepoint Router	12
Wiring.....	12
Wiring locations and colors	12
Network cable (Ethernet).....	14
Final Steps	14

Introduction

This guide provides information about the Axon Fleet 3 components that must be removed and returned to Axon following an Axon Fleet 3 Trial and Evaluation (T&E) period at your agency.


Components to Return

The following components must be returned to Axon:

- **Fleet 3 Hub**



- **Fleet 3 Hub Mounting Bracket**

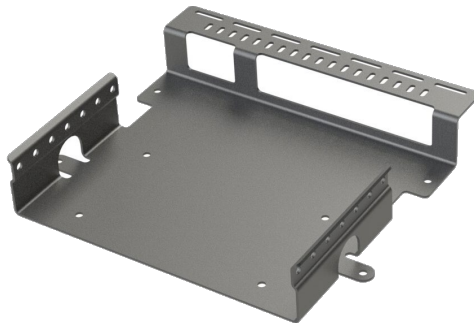

- **Fleet 3 Dual-View Camera**



- **Fleet 3 Interior Camera**




- **Fleet 3 Interior Antenna**



- **5-in-1 Magnetic Mounted Antenna**




- **Axon 2FF Supplied SIM Card (x2) (if applicable)**

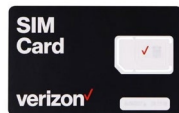

- **Axon Signal Vehicle**

Also known as Axon Signal Unit (ASU). Axon Signal Vehicle should only be removed if it was installed as part of the Axon Fleet 3 T&E.

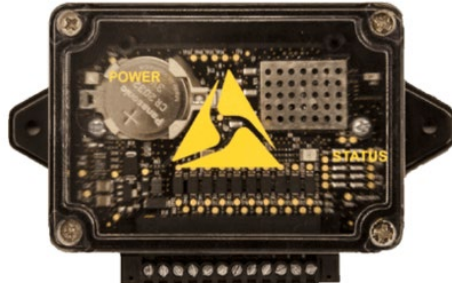

- **Cradlepoint Router – IBR900**

The Cradlepoint Router should only be removed if it was installed as part of the Axon Fleet 3 T&E.




Component Removal


Use the following guidelines to remove the Axon Fleet 3 components.

Fleet 3 Hub

1. Begin the Hub removal by cutting all cable ties that fasten the ethernet, power, and signal cables to the hub mounting plate.

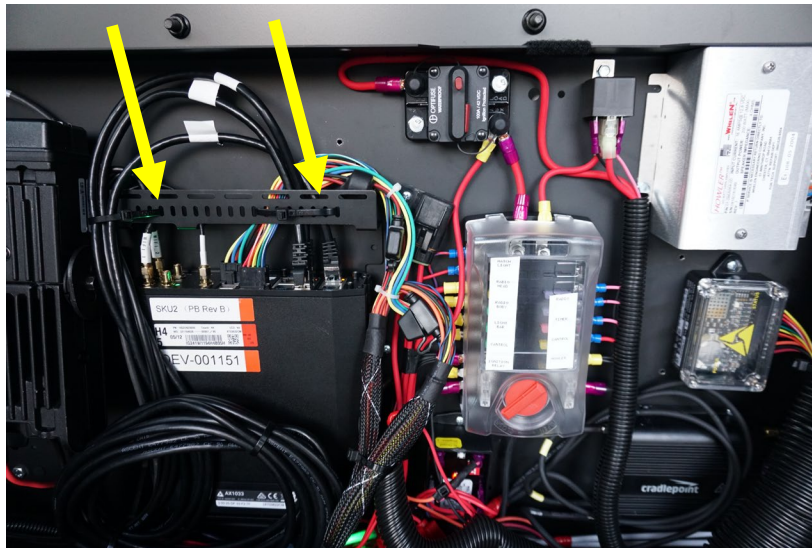


2. Using a Phillips head screwdriver, remove the four screws fastening the ethernet cable retainer. Disconnect the ethernet cables from the Hub.

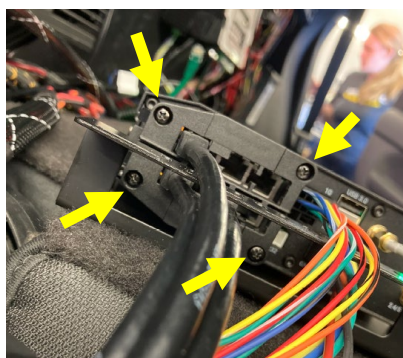

3. Unplug the Molex connector for power and the connector for Axon Signal.



4. Using an 8mm wrench, disconnect the 3 SMA connectors from the Hub (GPS, Bluetooth, WiFi)

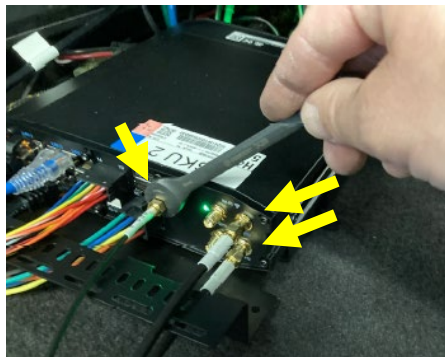

5. Using 2.5mm Allen wrench, remove the 6 Hub bracket screws, and slide the Hub out of the Hub Mounting Bracket.



6. Remove the Hub Mounting Bracket from the vehicle by removing the self-tapping screws or machine bolts that affix the Bracket to the vehicle.

Fleet 3 Dual-View Camera

1. Locate the pigtail connector for the Dual-View Camera. Generally, it can be found in the headliner near the windshield or fastened to the underside of an interior visor-mounted lightbar. Remove the tape from the pigtail support assembly and gently pry on the 4 tabs to separate the top of the assembly from the bottom. You may return these clips to Axon or discard them.



2. Remove the Dual-View camera from the bracket by removing the 8mm screw on top of the camera.



3. The Dual-View Camera mount will remain adhered to the windshield. Using a pry tool or putty knife, gently pry between the glass and the mount - rocking the mount back and forth to separate the adhesive. Be cautious when removing the mount and do not apply excessive concentrated pressure to the glass to avoid damage.

Fleet 3 Interior Camera

1. Locate the pigtail connector for the Interior Camera. Generally, it can be found on the foreside of the prisoner partition, secured to the tubular structure of the partition. It may also be tucked into the B-pillar or nearby location. Remove the tape from the pigtail support assembly and gently pry the 4 tabs to separate the top of the assembly from the bottom. You may return these clips to Axon or discard them.



2. Using a #1 Phillips screwdriver, remove the four set screws to remove the Interior Camera from the mount.



3. Remove the 2 self-tapping screws to remove the Interior Camera mount from the vehicle.



Fleet 3 Interior Antenna

1. Using a pry tool or putty knife, gently pry between the glass and the antenna - rocking the antenna back and forth to separate the adhesive. Be cautious when removing the antenna and do not apply excessive concentrated pressure to the glass to avoid damage.




Axon Signal Vehicle

IMPORTANT: If Axon Signal Vehicle (ASV) was installed in your vehicle before the T&E, skip this section and do not remove the ASV.

The Axon Signal Vehicle (ASV), also known as an Axon Signal Unit (ASU), is used to activate Body-Worn Cameras (BWCs) as part of the Fleet 3 solution. If you trialed Axon BWCs during your T&E, follow the steps below to uninstall the ASV and return it to Axon.

The ASV unit is generally mounted on top of or next to the Fleet 3 Hub.

All components should be mounted with 3M double-sided tape and can be pulled off their mounting surfaces.

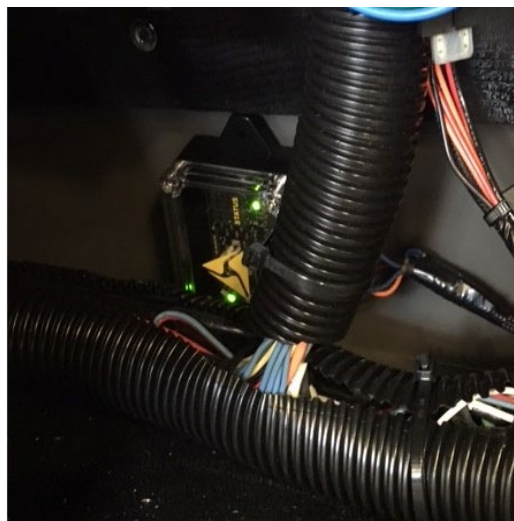

Cradlepoint Router

IMPORTANT: If a Cradlepoint router was installed in your vehicle before the T&E, skip this section and do not remove the router.

The Cradlepoint router is generally located within close proximity to the Fleet 3 Hub.

1. Using an 8mm wrench, disconnect the SMA connectors from the router.
2. Unplug the two ethernet cables and the power cord.



Wiring

This is an optional step. Your agency can remove the wiring as per your specific needs, but this is not necessary for returns.

Once all source wires have been disconnected and secured with tape, the wiring can be removed. It is no longer connected to source power. Some basic vehicle disassembly may be required to remove the wiring.

Wiring locations and colors


After locating equipment, trace the wiring back to its source in the vehicle. Some basic vehicle disassembly may be required to remove the wiring.

The following wire colors are used for the Fleet 3 System:

- Red – Constant 12V power
- Black – Ground
- Orange – Ignition sensing

- Signal trigger wires, for light bar, gun rack, etc., have a black or white stripe (depending on the wire color). See the following image for trigger wire colors.

The Axon Fleet 3 Wiring Harness, for reference:

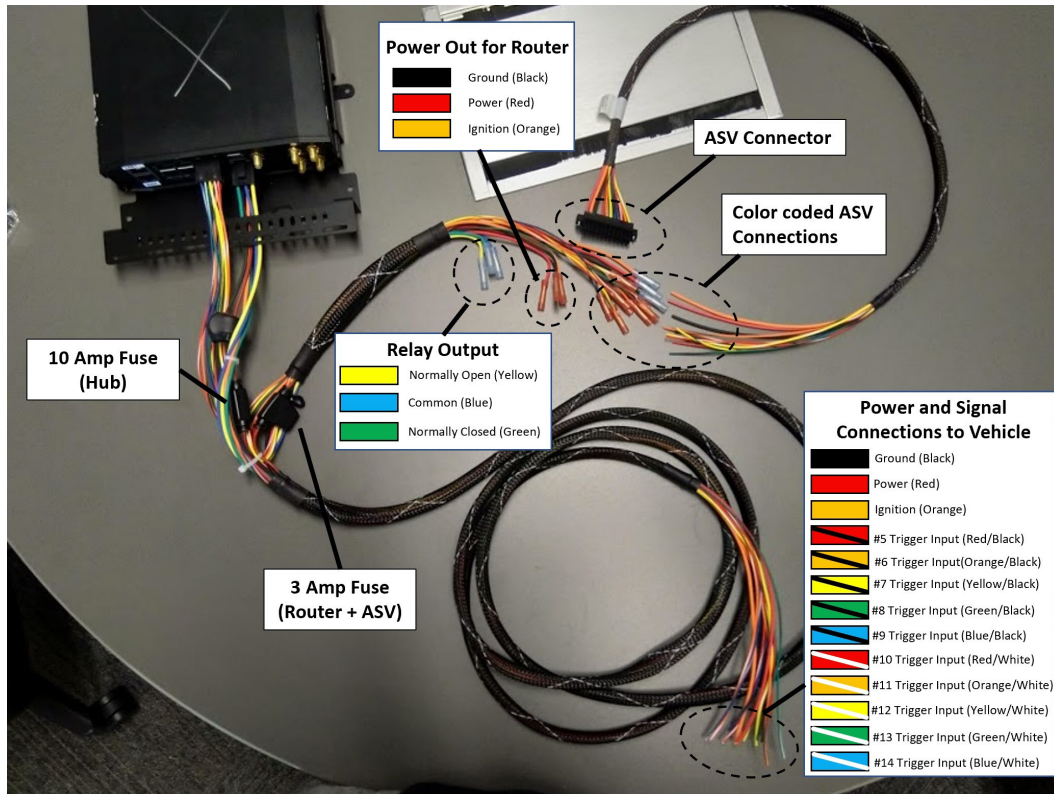

Network cable (Ethernet)

This is the black CAT6 cable that connects the following components:

- Dual-View Camera to Hub
- Interior Camera to Hub
- Hub to Router
- Router to vehicle MDC

The network cable may be unplugged and removed, if necessary. But additional vehicle disassembly may be required when removing.




Final Steps

Uninstall Axon Fleet Dashboard from the vehicle MDC.

1. On Windows, navigate to the start menu, type **Add or Remove Programs** in the search bar and launch it.

2. Search for **Axon Fleet Dashboard**. Click on it and select **Uninstall**.

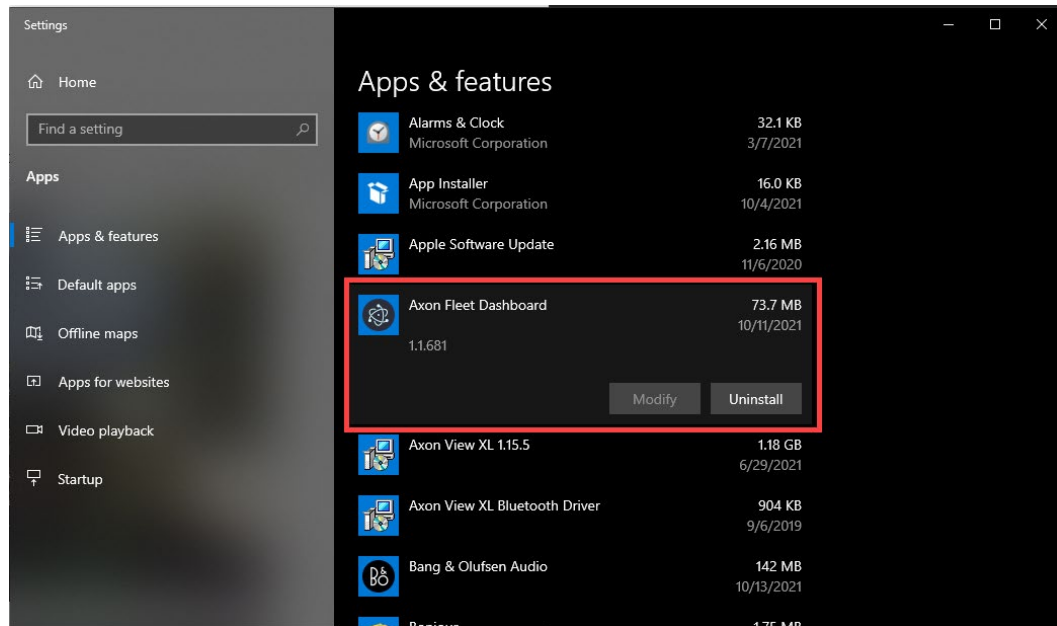

Package all removed components, minus wiring, in the custom case originally provided by Axon (Note that there may be a fee charged to your agency if the components are returned without the custom case). Contact your PSM or Sales Representative to request a shipping label and then return the package to Axon.