



安装 指南

拨号组合 | 表面安装 | 锁定锁舌 | 弹簧锁舌 | 平面凸轮 | 偏置凸轮

版本 1

日期: 112624

PG-D6CL-1X-XX-0-CHS



带拉手的椭圆形机身



带拉手的标准机身

机械后置锁体



12 毫米锁定锁舌



8 毫米锁定锁舌




12MM 弹簧锁舌



8 毫米弹簧锁舌



平面凸轮



偏移凸轮

金属柜门安装前准备

兼容性指南	3
所需工具和材料	3
拆卸三孔锁塞	3
移除挂锁搭扣	3

木门准备所需组件、工具和材料**4****表面安装 - 8 毫米锁定锁舌/弹簧锁舌**

用于厚度在 [0mm - 26mm] 之间的门

锁口片安装步骤	5
木柜门安装钻孔说明	6
钻孔尺寸模板	6
所需组件和工具	7
锁安装步骤	8

表面安装 - 12 毫米锁定锁舌/弹簧锁舌

用于厚度在 [0mm - 26mm] 之间的门

锁口片安装步骤	9
木柜门安装钻孔说明	10
钻孔尺寸模板	10
所需组件和工具	11
锁安装步骤	12

表面安装 - 平面凸轮

用于厚度在 [0mm - 20mm] 之间的门

木门钻孔说明	13
钻孔尺寸模板	13
所需组件和工具	14
锁安装步骤	15

表面安装 - 偏置凸轮

用于厚度在 [0mm - 9mm] 之间的门

钻孔尺寸模板	16
所需组件和工具	17
锁安装步骤	18


保固.....19**联系资讯.....20**

Digilock 电子锁与大多数 三孔结构、锁舌和把手门类型兼容。有些门可能需要改装，以清除障碍物。


兼容性指南

金属储物柜门的类型


单点门锁

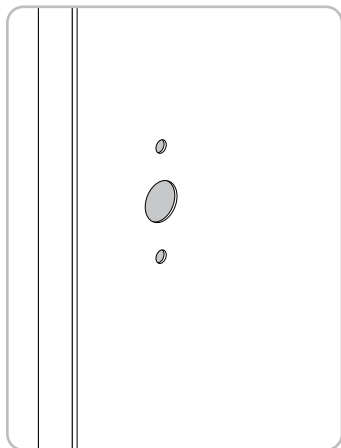


折叠门合页

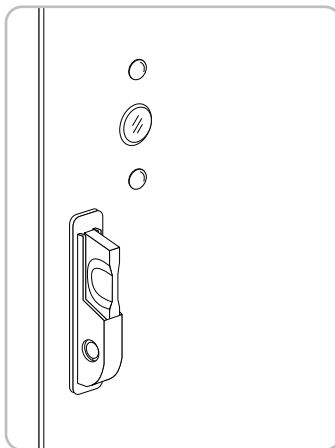

手把

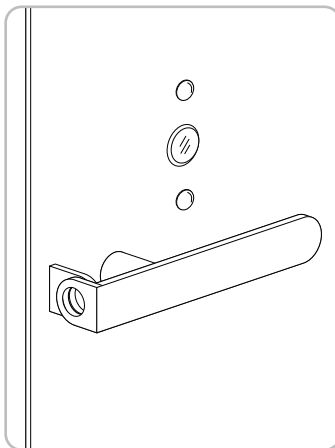


置物櫃掛鎖扣

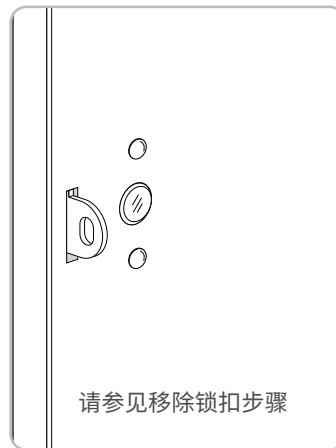


所需工具

* 不包括


磨具或钢锯*

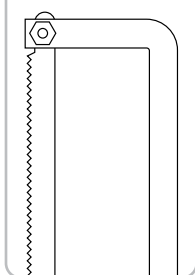


金属锉刀*

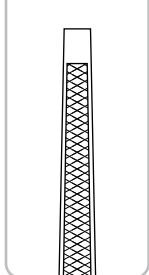

螺丝起子*

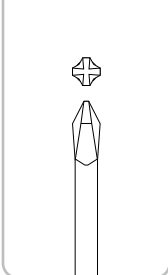


活动式扳手*

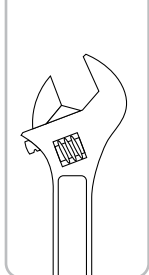


塞子拆除步骤

1

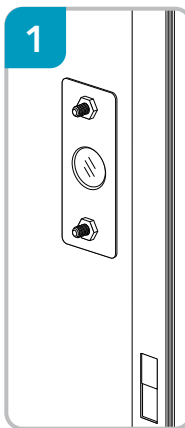


2

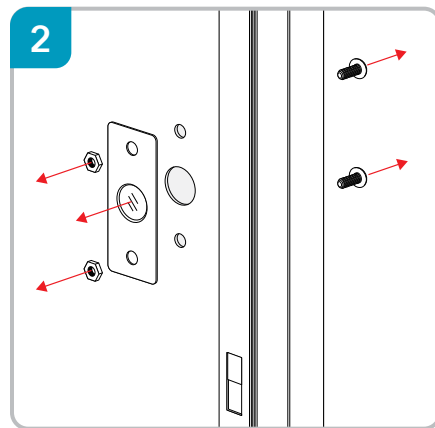


移除锁扣步骤

1

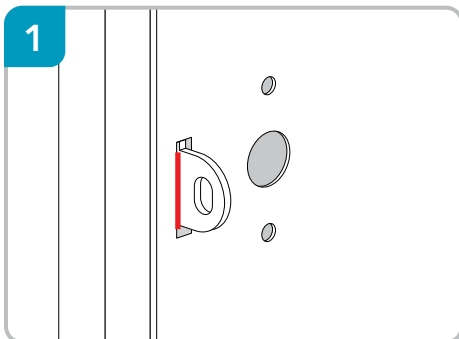


关上门并标记要切割搭扣的位置。

2

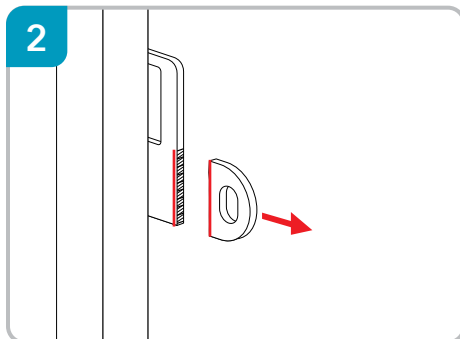

打开门，然后在标记的切割线上切割搭扣。

3

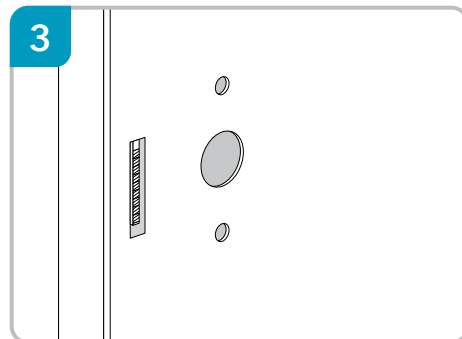


抚平粗糙或锋利的边缘、毛刺。

本部分适用于木质门、中密度纤维板门或非金属门的新安装。


所需组件

锁口片




直角

一般用途



安全

推荐用于弹簧锁舌产品

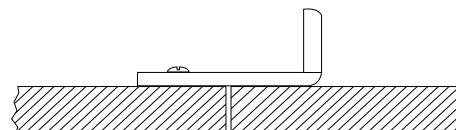

双开门

需要在锁口片上安装一个弹簧锁舌底座 (不包含)


所需工具和材料

* 不包括

1 - 十字螺丝刀 (#1)*




1 - 十字螺丝刀 (#2)*




1 - 铅笔*



可移除胶带*

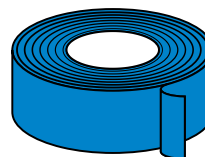


1 - 标尺*

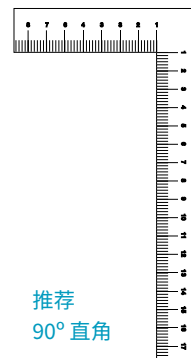


推荐
90° 直角

1 - 电钻*

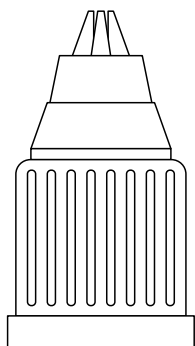

1 - 3/32" 木钻头*




建议使用尖头点
钻头

1 - 7/32" 木钻头*



建议使用尖头点
钻头

1 - 3/4" 木钻头*

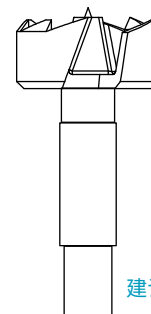


建议使用福氏钻头


注意 如果使用电钻, 建议仅用力矩**5 或更低的力度** 以避免过度拧紧。

锁口片安装步骤


下图所示为成角锁口片

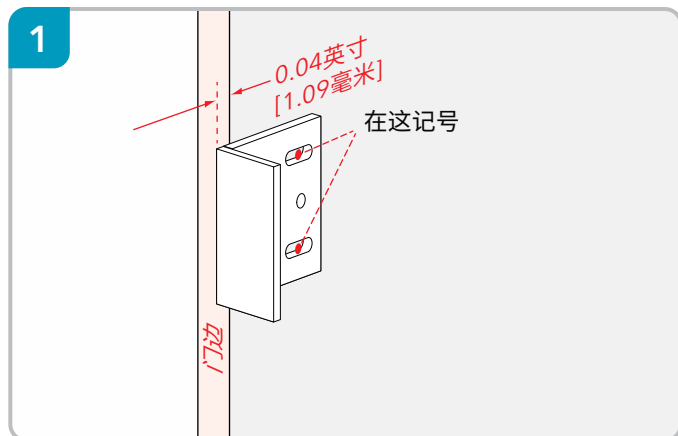


将锁将锁口片放置在门框上,使其与锁安装孔的中心对齐。

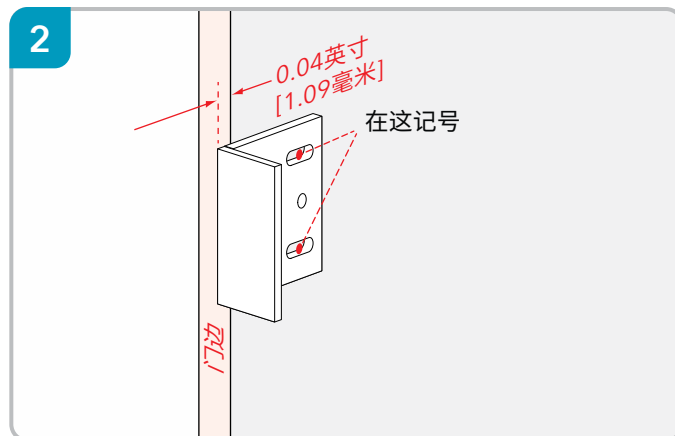


从门边缘预留 0.04 英寸 [1.09 毫米] 的悬空,并标记调整槽孔的位置。

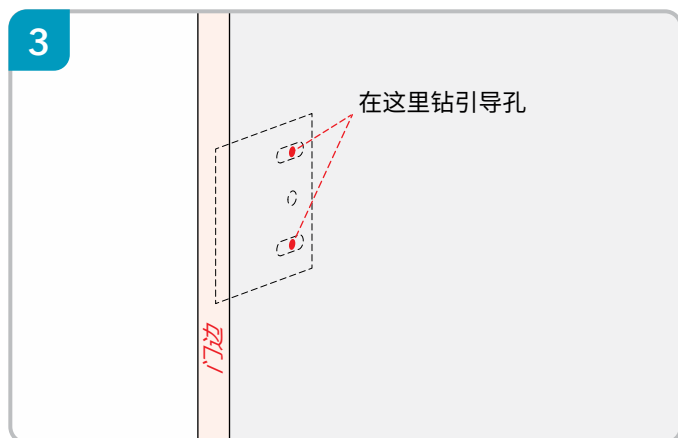


使用 $\frac{3}{32}$ 英寸钻头钻 0.09 英寸 [2.38 毫米] 的导向孔。

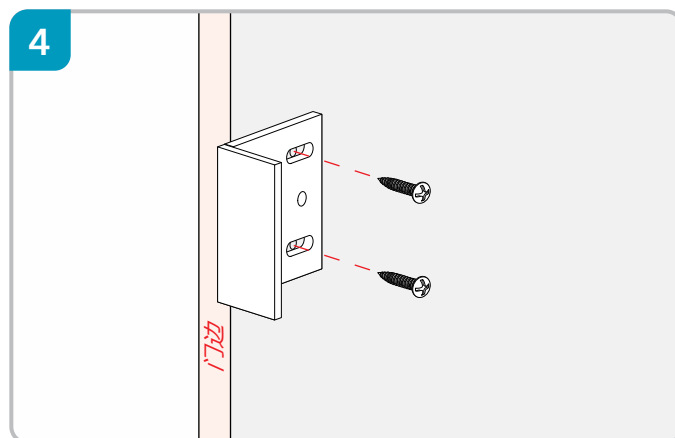

将锁口片和螺钉对准安装孔。请勿拧紧螺钉。

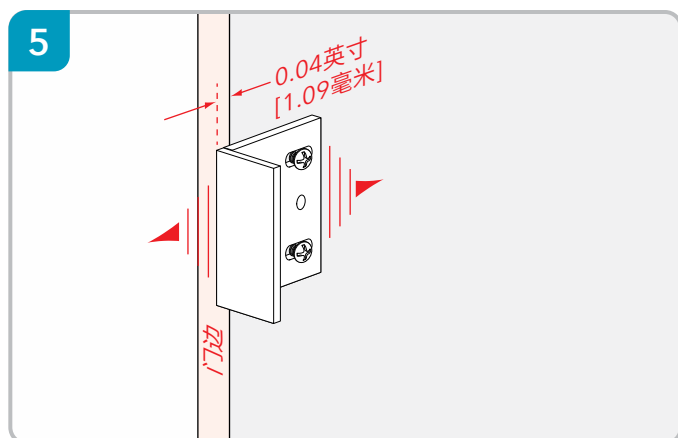


将锁口片调整到距门边缘 0.04 英寸 [1.09 毫米] 的适当位置,然后拧紧螺钉。

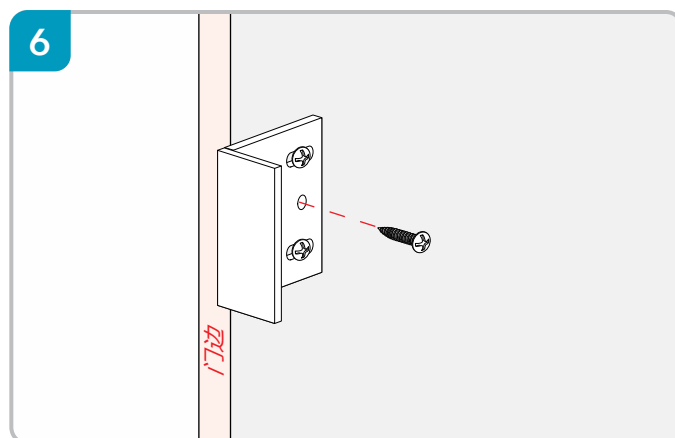

将剩余的螺钉插入中心安装孔并拧紧,以固定锁口位置。

柜门安装钻孔说明

柜门安装钻孔模板说明

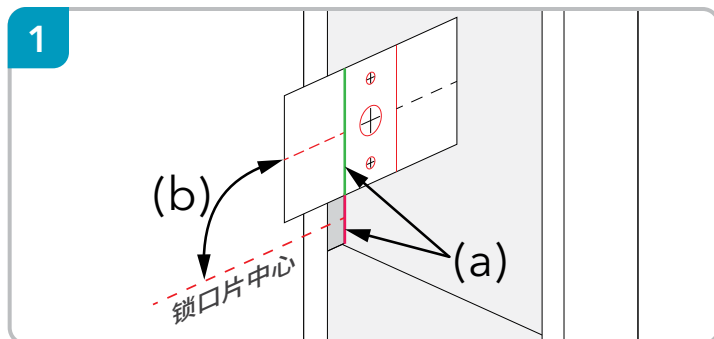


门打开后, 将模板置于柜门框上。

(a) 将锁口片边缘与锁口片标记对齐。

(b) 将模板置于锁口片的中心。


可以使用可移除胶带固定模板。

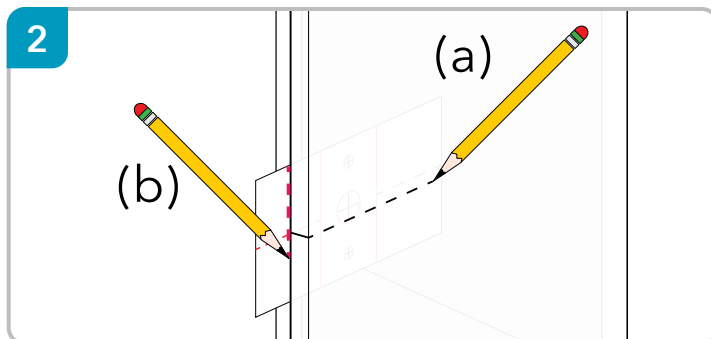

固定模板后, 关上门。

(a) 沿着模板中心线(锁口片的中心), 把线标记在门上。

(b) 标记门的边缘于模板上。

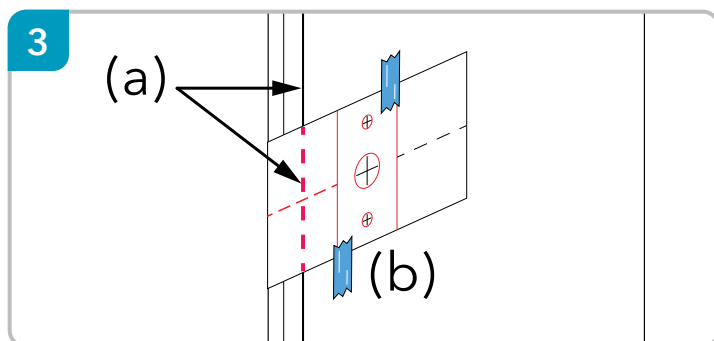


将模板放在门的正面。

(a) 将模板上绘制的标记线与门边对齐。

(b) 将模板与门上的标记置中。


使用可移除胶带固定模板。

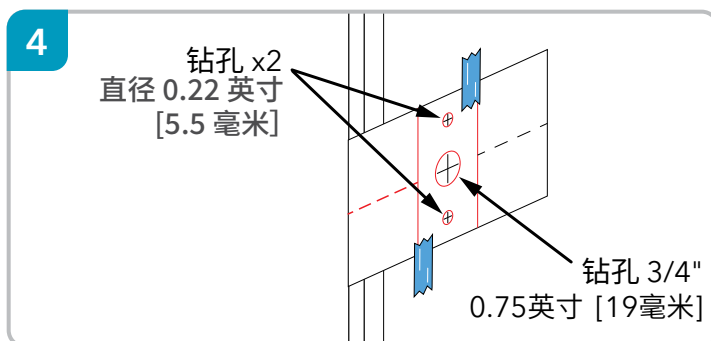

将安装孔的中心点标记在门的前面。按规定的尺寸钻孔。

孔安装模板

⚠ 打印前, 关闭打印机设置中的自动缩放功能, 设置为100% 尺寸打印 ⚠

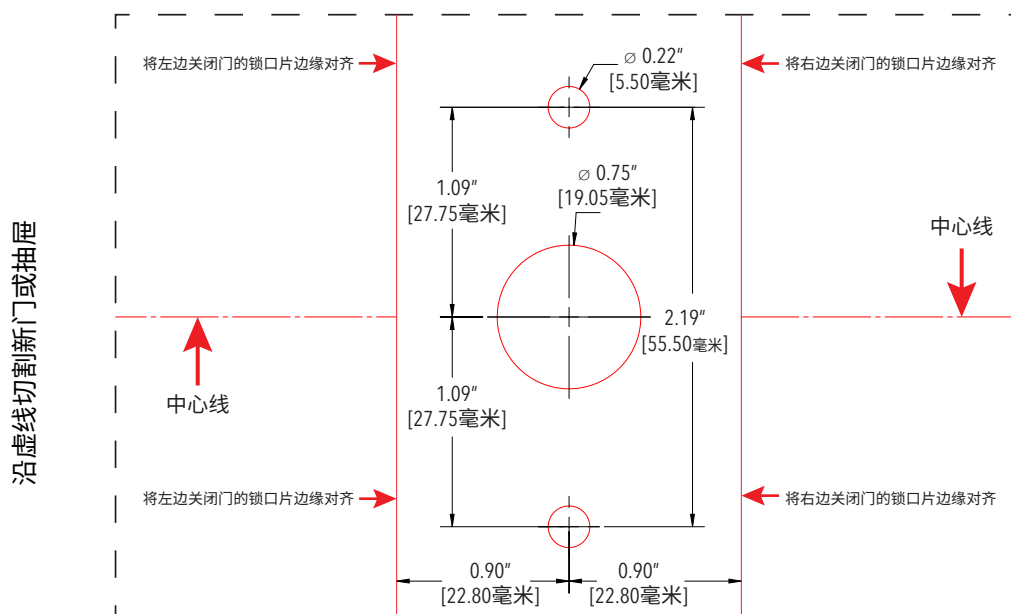


表面贴装 - 8 毫米锁定锁舌/弹簧锁舌




适用于厚度在 [0毫米 - 26毫米] 之间的门

所需组件

前锁板面

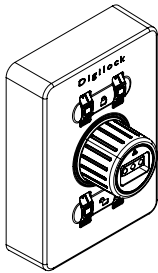


标准机身

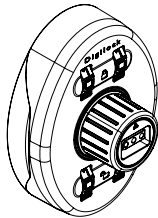


椭圆形机身

后置锁体

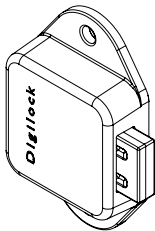


8 毫米锁定锁舌

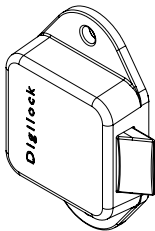

8 毫米弹簧锁舌

硬件

2 - #10-24 十字盘头螺丝

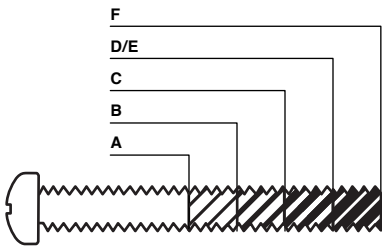


螺钉尺寸	长度	门厚度	
		最小	最大
A	1/2 英寸 [12.70 毫米]	0.0 毫米	5.0 毫米
B	3/4 英寸 [19.05 毫米]	8.5 毫米	12.0 毫米
C	7/8 英寸 [22.22 毫米]	11.5 毫米	15.0 毫米
D	1 1/8 英寸 [28.57 毫米]	15.0 毫米	19.5 毫米
E	1 1/8 英寸 [28.57 毫米] (带加长杆)	19.0 毫米	21.5 毫米
F	1 3/8 英寸 [34.92 毫米]	21.5 毫米	26.0 毫米

所需工具

* 不包括

1 - 十字头螺丝刀 (#2)*



注意 如果使用电钻, 建议仅用力矩**5 或更低的力度** 以避免过度拧紧。

锁安装步骤


为便于说明, 图中显示的是带锁定锁舌后置锁体的椭圆形机身前锁板面。




在门打开时测门锁, 以确保锁舌操作正常。
安装完成后, 请参阅产品指南来设置和操作锁。

锁口片安装步骤


下图所示为成角锁口片

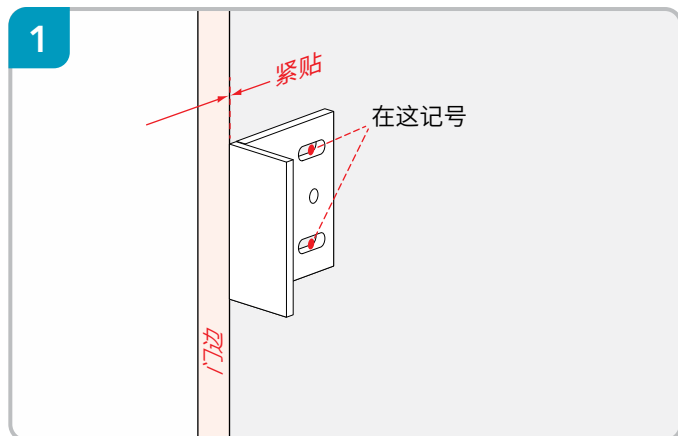


将锁将锁口片放置在门框上,使其与锁安装孔的中心对齐。

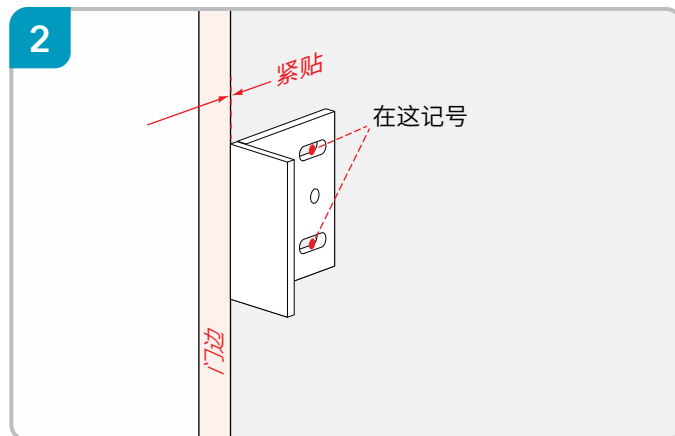


保持与门边齐平,并标记调整槽孔的位置。

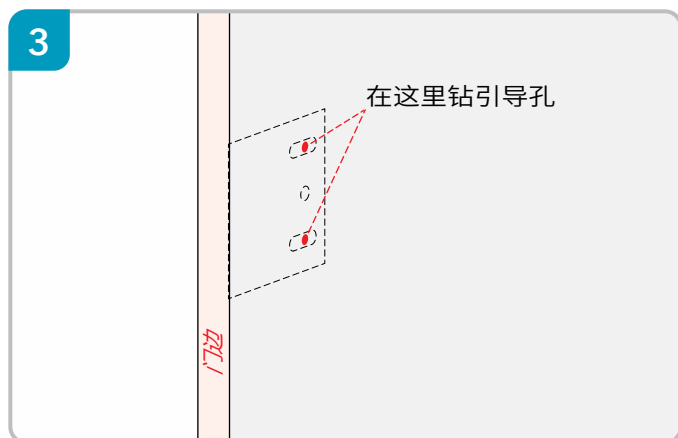


使用 $\frac{3}{32}$ 英寸钻头钻 0.09 英寸 [2.38 毫米] 的导向孔。

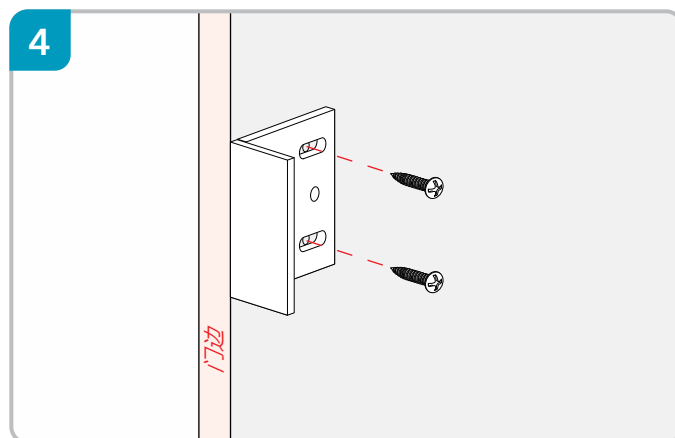

将锁口片和螺钉对准安装孔。请勿拧紧螺钉。

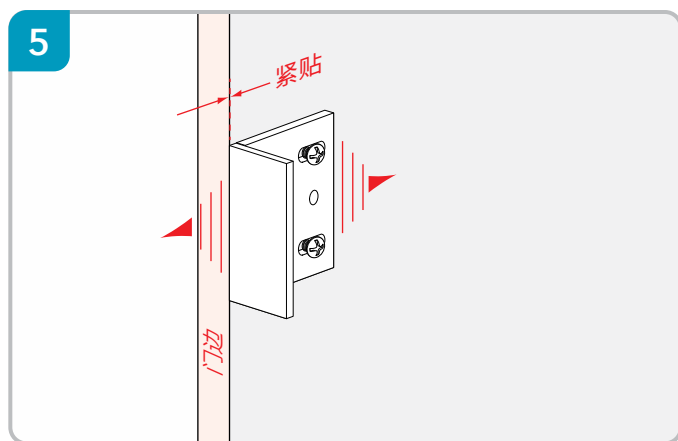





将锁口片调整到与门边齐平的适当位置,然后拧紧螺钉。

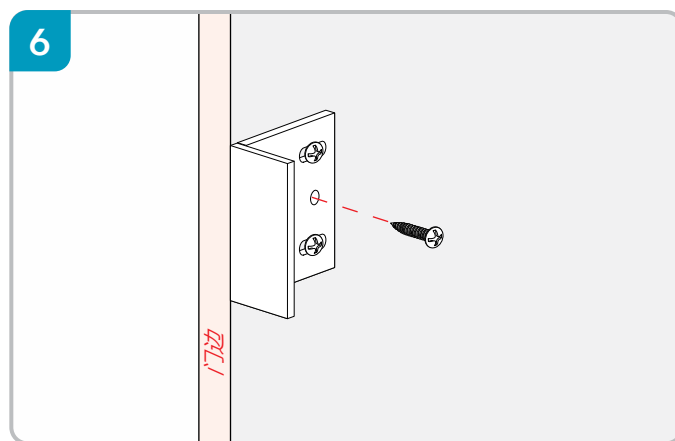

将剩余的螺钉插入中心安装孔并拧紧,以固定锁口位置。

木门钻孔说明

柜门安装钻孔模板说明

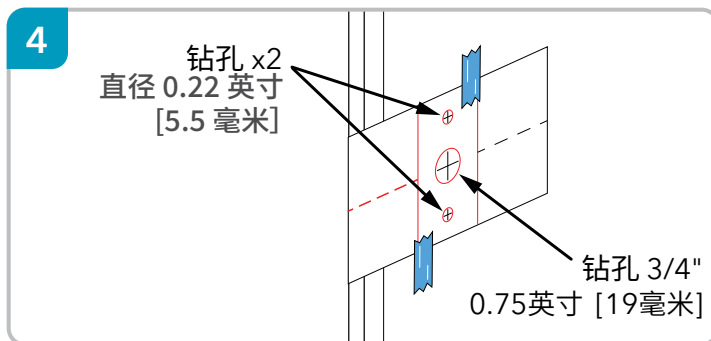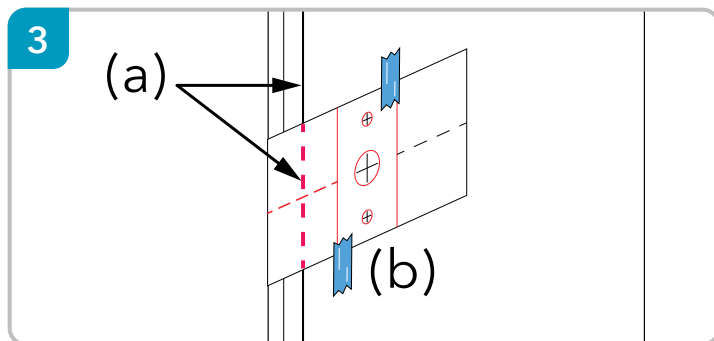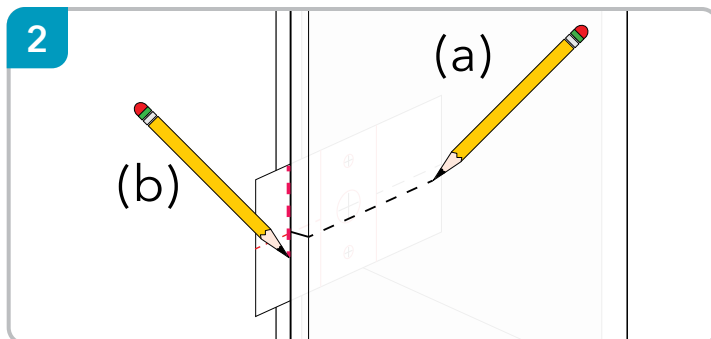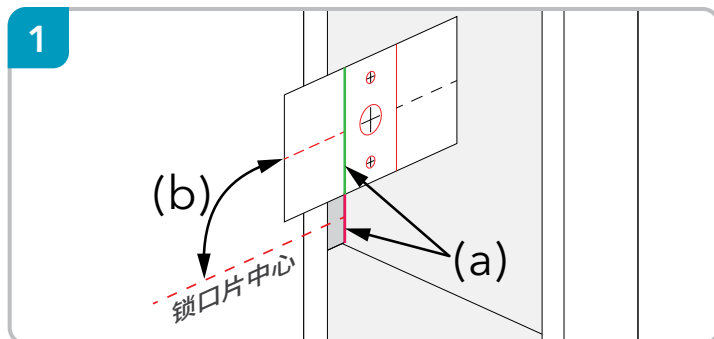

将模板放在门的正面。

(a) 将模板上绘制的标记线与门边对齐。


(b) 将模板与门上的标记置中。

使用可移除胶带固定模板。

将安装孔的中心点标记在门的前面。按规定的尺寸钻孔。

孔安装模板

⚠ 打印前, 关闭打印机设置中的自动缩放功能, 设置为100% 尺寸打印 ⚠

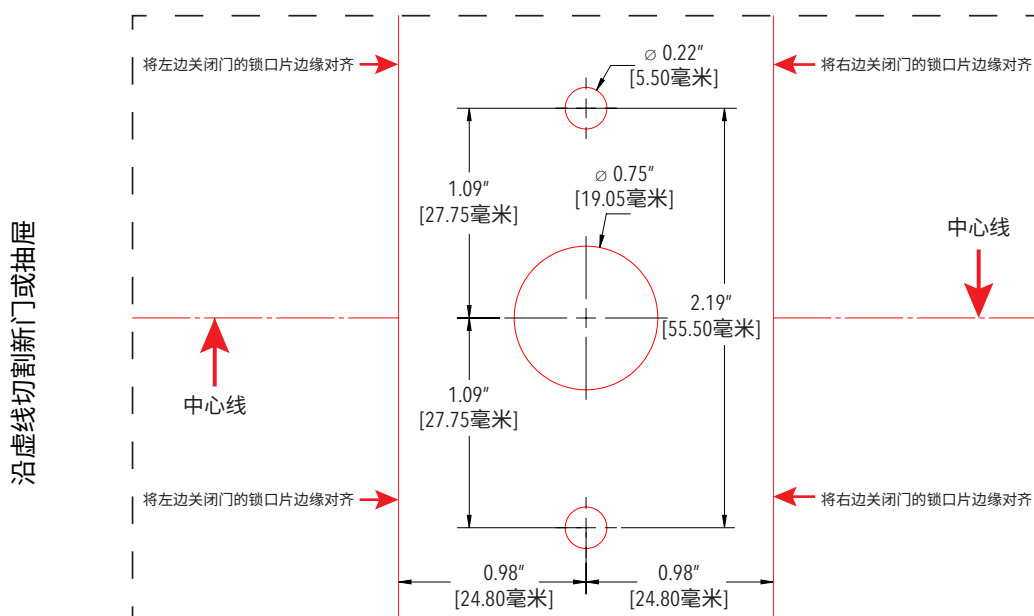


表面安装 - 12 毫米锁定锁舌/弹簧锁舌




适用于厚度在 [0毫米 - 26毫米] 之间的门

所需组件

前锁板面

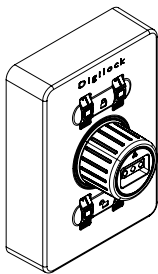


标准机身

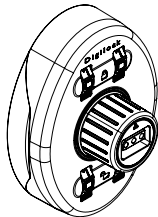


椭圆形机身

后置锁体

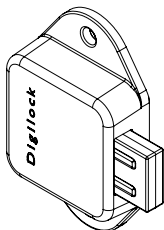


12 毫米锁定锁舌

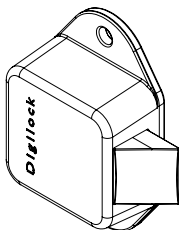

12 毫米弹簧锁舌

硬件

2 - #10-24 十字盘头螺丝

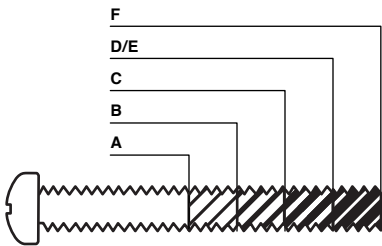


螺钉尺寸	长度	门厚度	
		最小	最大
A	1/2 英寸 [12.70 毫米]	0.0 毫米	5.0 毫米
B	3/4 英寸 [19.05 毫米]	8.5 毫米	12.0 毫米
C	7/8 英寸 [22.22 毫米]	11.5 毫米	15.0 毫米
D	1 1/8 英寸 [28.57 毫米]	15.0 毫米	19.5 毫米
E	1 1/8 英寸 [28.57 毫米] (带加长杆)	19.0 毫米	21.5 毫米
F	1 3/8 英寸 [34.92 毫米]	21.5 毫米	26.0 毫米

所需工具

* 不包括

1 - 十字头螺丝刀 (#2)*



注意 如果使用电钻, 建议仅用力矩**5 或更低的力度** 以避免过度拧紧。

锁安装步骤

为便于说明, 图中显示的是带锁定锁舌后置锁体的椭圆形机身前锁板面。



使用安装孔将后置锁体固定在门后并对齐。将前后锁体带到一起。

使用螺丝表选择适合您门厚度的螺丝长度。

将螺钉插入安装孔。

将螺丝拧紧至 **正确的扭力水平: 5 或更低**


注意: 安装拧得太紧可能会导致锁无法正常操作。



在门打开时测门锁, 以确保锁舌操作正常。
安装完成后, 请参阅产品指南来设置和操作锁。

木门钻孔说明

柜门安装钻孔模板说明

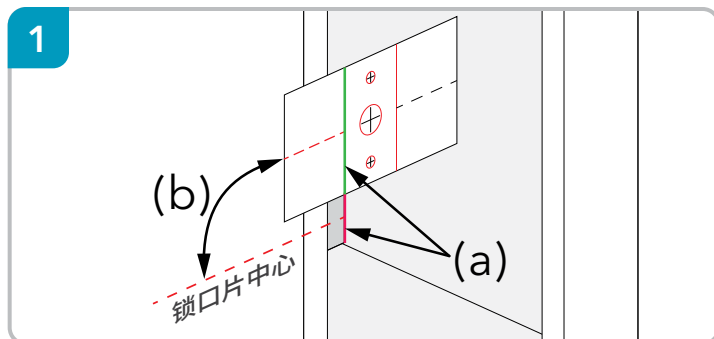


门打开后，将模板置于柜门框上。

(a) 将锁口片边缘与锁口片标记对齐。

(b) 将模板置于锁口片的中心。


可以使用可移除胶带固定模板。

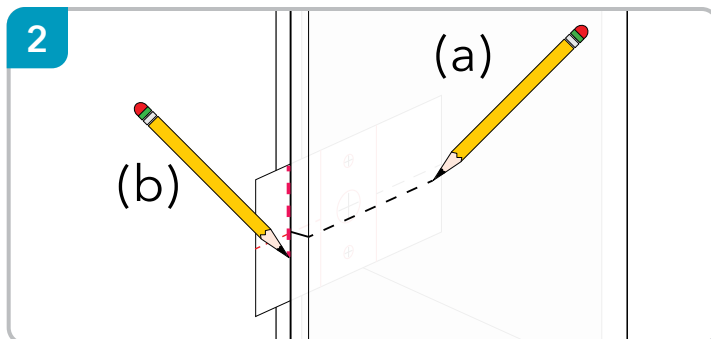

固定模板后，关上门。

(a) 沿着模板中心线(锁口片的中心)，把线标记在门上。

(b) 标记门的边缘于模板上。

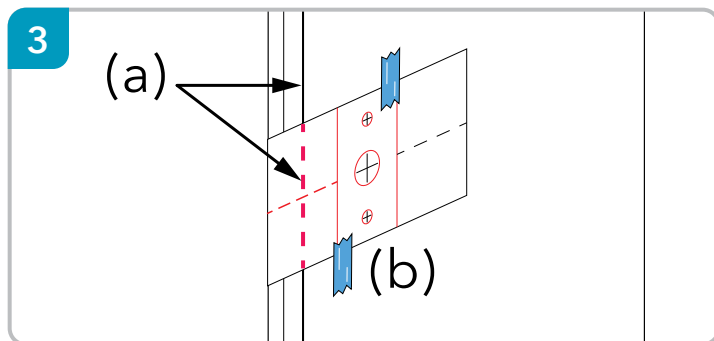


将模板放在门的正面。

(a) 将模板上绘制的标记线与门边对齐。

(b) 将模板与门上的标记置中。


使用可移除胶带固定模板。

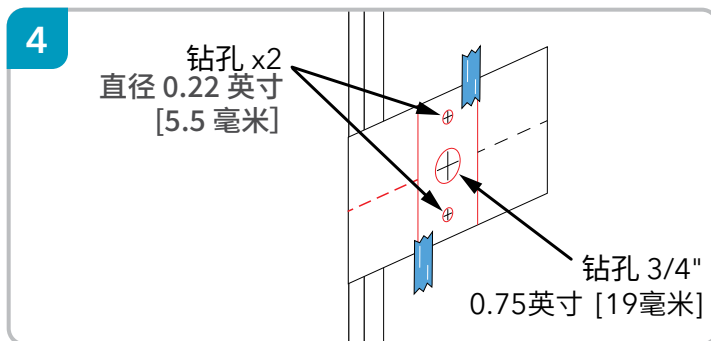

将安装孔的中心点标记在门的前面。按规定的尺寸钻孔。

钻孔尺寸模板

⚠ 打印前，关闭打印机设置中的自动缩放功能，设置为100% 尺寸打印 ⚠

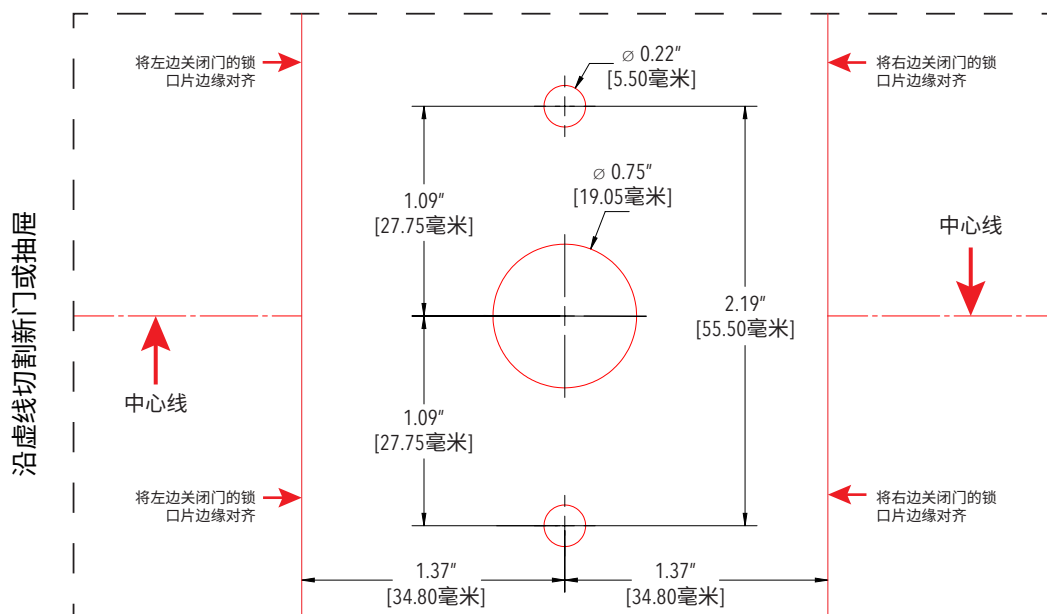


表面安装 - 平面凸轮




用于厚度在 [0毫米 - 20毫米] 之间的门

所需组件

前锁板面

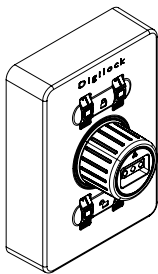


标准机身

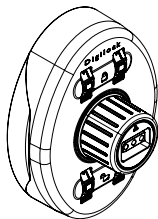

椭圆形机身


后置锁体



平面凸轮

硬件

2 - #10-24 十字盘头螺丝

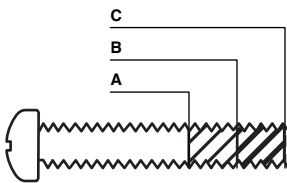


螺钉尺寸	长度	门厚度	
		最小	最大
A	1/2 英寸 [12.70 毫米]	0 毫米	9 毫米
B	3/4 英寸 [19.05 毫米]	9 毫米	15 毫米
C	1 英寸 [25.40 毫米]	15 毫米	20 毫米

所需工具

* 不包括


1 - 十字头螺丝刀 (#2)*



注意 如果使用电钻, 建议仅用力矩**5 或更低的力度** 以避免过度拧紧。


锁安装步骤

图示为椭圆形机身前锁板面。

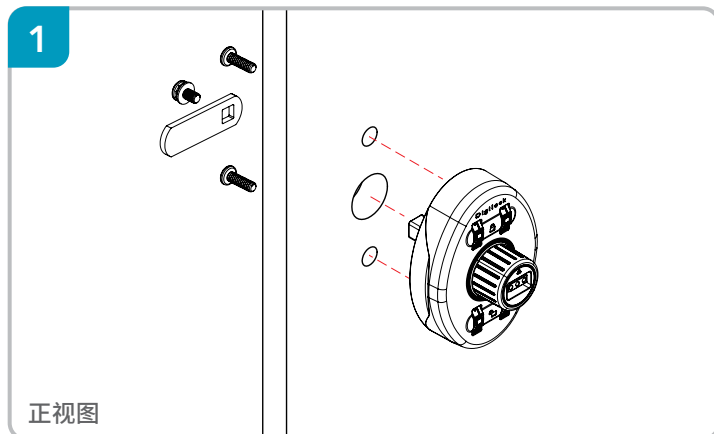

正视图

使用安装孔将前锁板面固定在门后并对齐。插入平面凸轮。

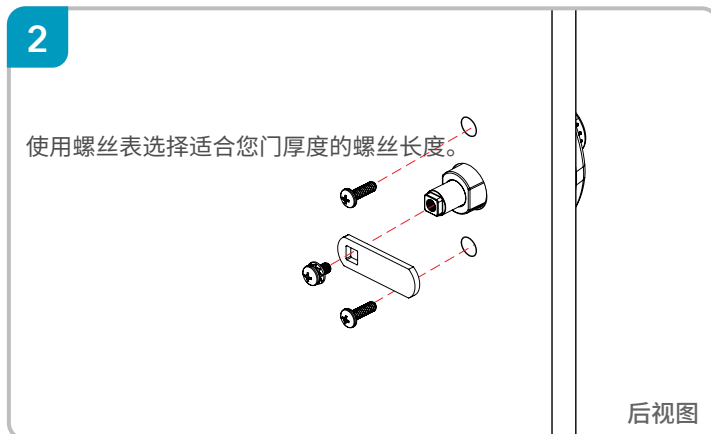

后视图

将螺钉插入安装孔。

将螺丝拧紧至 **正确的扭力水平：5 或更低**

注意：安装拧得太紧可能会导致锁无法正常操作。



后视图


正视图

在门打开时测试锁，以确保凸轮正常运行。

安装完成后，请参阅产品指南来设置和操作锁。

钻孔尺寸模板

⚠ 打印前,关闭打印机设置中的自动缩放功能,设置为100% 尺寸打印 ⚠

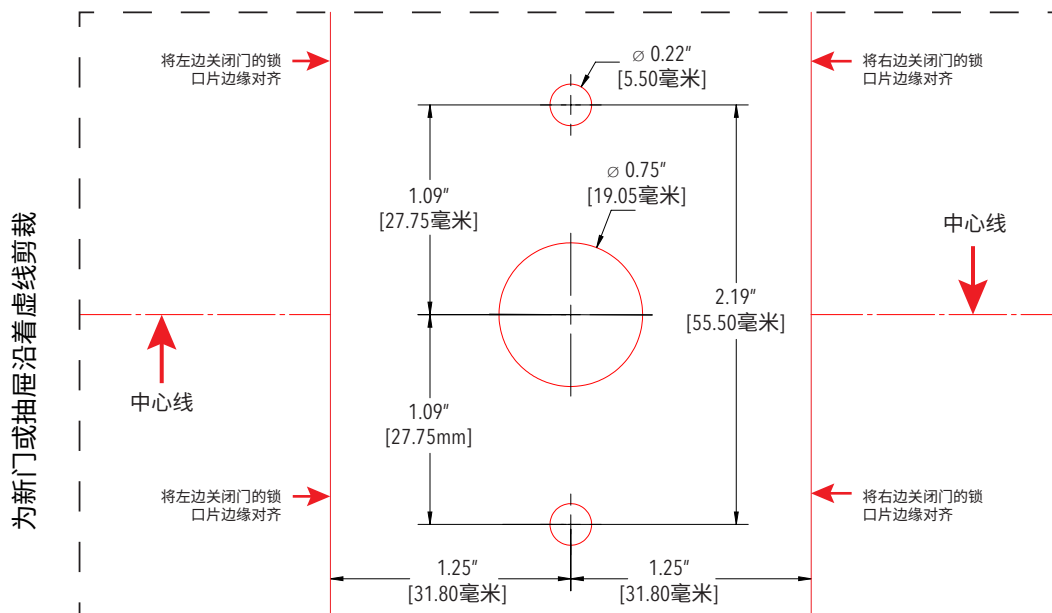


表面安装 - 偏置凸轮

Cleo™


适用于 [0 毫米m - 9 毫米] 厚度的门

所需组件

前锁板面

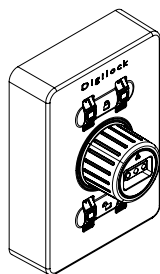


标准机身

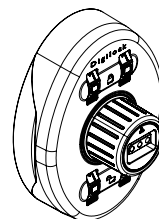

椭圆形机身


后置锁体



偏置凸轮

硬件

2 - #10-24 十字盘头螺丝



螺钉尺寸

A

长度

1/2 英寸 [12.70 毫米]

门厚度

最小

0 毫米


最大

9 毫米

所需工具

* 不包括


1 - 十字头螺丝刀 (#2)*



注意 如果使用电钻, 建议仅用力矩**5 或更低的力度** 以避免过度拧紧。

锁安装步骤

图示为椭圆形机身前锁板面。

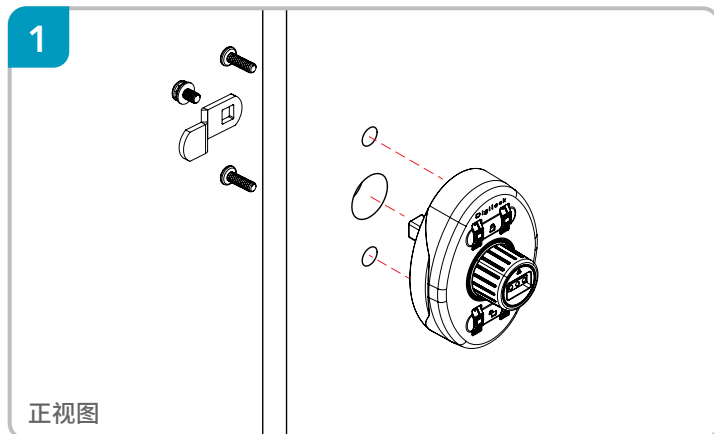

使用安装孔将前锁板面固定在门前并对齐。插入偏置凸轮。



使用螺丝表选择适合您门厚度的螺丝长度。

将螺钉插入安装孔。

将螺丝拧紧至 **正确的扭力水平：5 或更低**

注意：安装拧得太紧可能会导致锁无法正常操作。



在门打开的状态下测试锁，确保偏置锁舌工作正常。
安装完成后，请参阅产品指南来设置和操作锁。

LIMITED WARRANTY. Company warrants to the original purchaser of Product manufactured by Company to be free of defects in material and workmanship, provided: (1) Company has been notified of such defects within two years of purchase date and been given the opportunity of inspection by return of any alleged defective Product to Company, or its authorized distributor, free and clear of liens, encumbrances, transportation prepaid, accompanied by the statement of defects and proof of purchase; and (2) Product has not been subject to modification, abuse, misuse, mishandling, misapplication, neglect (including but not limited to improper maintenance), accident, improper installation, alteration and/or modification (including but not limited to use of unauthorized parts or attachments), disassembly, or adjustment or repair performed by anyone other than an authorized service personnel during such period; and (3) such defect has not been caused by corrosion or ordinary wear and tear. This warranty does not cover batteries, normal wear and tear of parts and/or damage resulting from any of the following: negligent use or misuse of product, use of improper voltage or current, and/or use contrary to operating instructions. The exclusive remedy shall not be deemed to have failed of its essential purpose so long as Company is willing and able to repair or replace non-conforming Product in the prescribed manner.

Unless the product is listed as IP55 rated or otherwise expressed by Company on the sales order acknowledgment, Product is not designed or intended for exterior use or where exposed to moisture. Any use where Product is exposed to moisture is not covered by any warranties and voids any warranties and any resulting damage caused by direct exterior exposure or moisture is at the Buyer's own risk.

The liability of Company for any breach of the foregoing warranty shall not extend to dismantling, installing or reinstalling, but shall be limited to repairing or replacing said items, as Company's option, within a reasonable time after receipt of written notice from Buyer, within the period of time stipulated herein, of any such non-conforming Product, provided that (i) such notice is given immediately upon the detection of such non-conformance and (ii) such notice is received within the time period stipulated herein. BUYER AND COMPANY EXPRESSLY AGREE THAT THE BUYER'S SOLE AND EXCLUSIVE REMEDY AGAINST COMPANY SHALL BE FOR THE REPAIR OR REPLACEMENT (AT COMPANY'S OPTION) OF NON-CONFORMING PRODUCT AS PROVIDED HEREIN.

COMPANY SPECIFICALLY DISCLAIMS ANY OTHER WARRANTIES, EXPRESS, IMPLIED, OR STATUTORY, INCLUDING WITHOUT LIMITATION THE IMPLIED WARRANTY OF FITNESS FOR A PARTICULAR PURPOSE AND THE IMPLIED WARRANTY OF MERCHANTABILITY, AND COMPANY ALSO SPECIFICALLY DISCLAIMS ANY LIABILITY FOR CONSEQUENTIAL OR INCIDENTAL DAMAGES. IN NO EVENT SHALL COMPANY BE LIABLE FOR INCIDENTAL OR CONSEQUENTIAL DAMAGES ARISING OUT OF OR IN CONNECTION WITH THIS AGREEMENT (INCLUDING BUT NOT LIMITED TO BREACH OF ANY OBLIGATION IMPOSED ON COMPANY HEREUNDER OR IN CONNECTION HERewith) OR THE USE, STORAGE, DISPOSAL OR HANDLING OF PRODUCT. Consequential damages for purposes hereof shall include, without limitation, loss of use, income or profit, shutdown, slowdown or stoppage of any production line or facility, or losses sustained as the result of injury (including death) to any person, or loss of or damage to property (including without limitation property handled or processed by the use of Product). Buyer shall indemnify Company against all liability, cost or expense which may be sustained by Company on account of any such loss, damage or injury.

Company will not evaluate warranted Product without Buyer obtaining a Return Merchandise Authorization (RMA) number from Company. Such returns must be prominently marked with the RMA number and shipped prepaid.

Company makes no other warranty, and the warranty is limited to the duration of the expressed warranty period as set forth above

NOTE: Should Product be considered a consumer product as may be covered by the Magnusson Moss Federal Warranty Act, please be advised that: (1) some states do not allow limitations on incidental consequential damages or how long an implied warranty lasts so that the above limitations may not fully apply; (2) this warranty gives specific legal rights, and a buyer may also have other rights which may vary from state to state.

LIMITATION OF LIABILITY. Company's maximum liability for any damages resulting from or caused by Product, whether in contract, tort, or otherwise, is limited to the purchase price of Product. In no event shall Company be liable for any consequential damages of any nature arising from the sale or use of Product, whether in contract, tort or otherwise, by either use or purchase of Product, the user or purchaser agrees to this limit on Company's liability. Company is not responsible for any modification, addition or alteration to Product by others.

Company reserves the right to make changes in designs and specifications or to make additions or improvements on its products without notice and without incurring any obligation to incorporate them on products previously manufactured.



联系

DIGILOCK 美国

销售

电子邮件: sales@digilock.com

电话: +1 800 989 0201

技术支持

电子邮件: support@digilock.com

免费电话: +1 866 712 7071

DIGILOCK 欧洲

销售

电子邮件: sales@digilock.eu

电话: +31 0 20 303 3060

技术支持

电子邮件: support@digilock.eu

免费电话: +1 866 696 0979

DIGILOCK 亚洲

销售

电子邮件: sales@digilock.asia

电话: +852 2776 0800

技术支持

电子邮件: support@digilock.asia

免费电话: +1 866 699 9180