


# Axon Body 3 Camera



QUICK  
START  
GUIDE

For detailed user guides, video walkthroughs, and training, go to <https://my.axon.com/s/axon-body-3> (QR code above).

## Camera controls

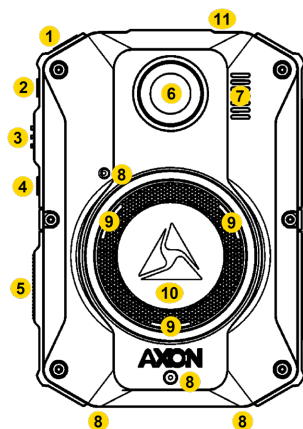

1. Power
2. Volume up
3. Select
4. Volume down
5. Program
6. Lens
7. Speaker
8. Microphone (4)
9. Triad LED (3)
10. Event
11. Operation LED (top)

## Docking

Place your camera in your Axon Dock to charge the battery, offload videos, and download system updates. Ensure the USB port is dry and free of dirt and debris before placing the camera in a dock or connecting a USB-C cable.

## Battery

Depending on agency settings, your camera may only charge to 90% and display **Full** to preserve battery health; this is not an error.

## Water

Your camera is resistant to water splashes but is not immersible. While it can handle exposure to rain, avoid downpours. Treat it with the same care you would use with any expensive electronic device.

## Button actions

Action	Button Presses
Add marker	Press <b>Select</b> while recording
Enter or exit audio mute	Press <b>Select</b> for three seconds while recording
End recording	Press <b>Event</b> for three seconds
Enter menu	Press <b>Program</b> and <b>Power</b> simultaneously
Enter Sleep mode	Press <b>Power</b> then <b>Select</b> to confirm
Enter Stealth mode	Press <b>Volume Down</b> for three seconds*
Exit Sleep mode	Press <b>Power</b> or start a recording
Exit Stealth mode	Press <b>Volume Up ▲</b> or <b>Volume Down ▼</b> for three seconds*
Pairing	Press <b>Event + Program</b> simultaneously
Power off	Press <b>Power</b> for three seconds
Power on	Press <b>Power</b> until short vibration
Speaker volume	Press <b>Volume Up ▲</b> or <b>Volume Down ▼</b>
Start recording	Double-press <b>Event</b>
Toggle light setting	Press <b>Volume Up ▲</b> for three second, then tap to toggle modes

\* The camera remembers the previous volume and light settings when exiting Stealth mode.


## Axon View (iOS or Android)

Use the Axon View mobile app to play video and add metadata (case ID, title, and category). Axon View can share highly accurate mobile phone location with Axon Body 3. Axon recommends setting Axon View location permissions to **Always** to use this capability.

1. Open Axon View, select an Axon Body 3 camera, sign into your Evidence.com account, and tap **Initiate Pairing**.
2. With the camera powered on, press **Select** and **Event** at the same time.
3. Follow the on-screen instructions on the Axon View application to pair your camera to Axon View.



## Icons during use

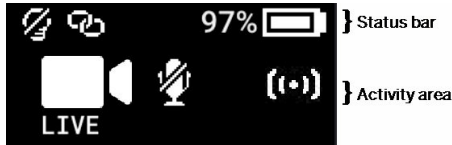

Status Bar Icon	Description
58%	Battery capacity
	Battery charging
	Battery low ( $\leq 10\%$ )
	Camera paired
	Lights off
S	Stealth mode on

Activity Area Icon	Description	Operation LED
	Axon Respond Livestreaming*	Blinking purple
	Microphone off (mute mode)	Blinking blue
PAIRING	Pairing mode*	Blinking blue
READY	Ready (Buffering) mode	Blinking green (also Triad)
	Recording	Blinking red (also Triad)
	Recording started by Axon Signal* broadcast	Blinking red
	Sleep mode*	Off
n/a	Startup or shutdown	Solid red

\* May not be enabled at your agency.

## Icons when docked

Display	Description	Triad LED
58%	<b>Battery capacity</b>	
	<b>Battery charging</b> – Triad LED colors reflect the charge level.	Green: > 90% Yellow: 11-89% Red: <10%
	<b>Battery optimized charging</b> – Charge level is reduced to protect battery health during extended time in dock.	Same as normal charging above
DEVICE ERROR #	<b>Device error #.</b> Refer to the common codes in the user guide.	Blinking red
NETWORK ERROR	<b>Network error</b> – Check network connection, see device page in Axon Evidence and troubleshooting instructions at <a href="http://help.axon.com">help.axon.com</a> .	Blinking red and green
	<b>Updating firmware or settings</b> – Camera will resume normal operation after update. Operation LED solid white. Display may also show UPDATING.	Spinning white
USERID123	<b>User/Badge ID</b> – Displays right after docking, when the camera is charging, for 10 seconds after undocking, and when no other activity is in progress.	n/a
UPLOADING	<b>Uploading</b> – In progress; also shows the number being updated and total, such as 1/5.	Spinning yellow

## Axon View XL Standalone (Windows)

Use the ViewXL Standalone desktop app to play video and add metadata. Administrators can use View XL Standalone to register and assign cameras.

After signing into Axon View XL and selecting Standalone Mode, connect the camera to the computer using an Axon-supplied USB-C cable.